

California Environmental Protection Agency



ARB Approved

Installation, Operation and Maintenance Manual

**For Standing Loss Control Vapor Recovery System
for Existing Installations of
Aboveground Storage Tanks
As Certified by Executive Order VR-301-B**

October 28 2009

NOTICE:

The **ARB Approved Installation, Operation and Maintenance Manual for the Standing Loss Control Vapor Recovery System for Existing Installations of Aboveground Storage Tanks** (AST) describes the tools and methods required to install the Standing Loss Control Enhanced Vapor Reduction (EVR) System.

The paint manufacturers written instructions, procedures and guidelines will be adhered to when preparing and applying white paint to existing ASTs or the warranty will be void. It is the owner's (of the AST) responsibility to ensure that the Standing Loss Control EVR System is properly and safely installed, operated and maintained on their existing ASTs. The owner may also choose to hire any qualified contractor or technician to install, operate and maintain the Standing Loss Control EVR System on their ASTs. All the current requirements of state, federal and local codes for installation and repair of gasoline dispensing equipment must be adhered to. Installation, operation and maintenance of the Standing Loss Control EVR System must also meet all the necessary safety precautions and site safety requirements to assure a safe and trouble free installation.

A list of recommended qualified technicians/contractors can be located by contacting the manufacturer of the Standing Loss Control EVR System. The following is a list of manufacturers and their contact information:

PPG High Performance Coatings

4635 N. Cedar Avenue
Fresno, California 93726-1002
Phone: (559) 222-3131

PPC Ponderosa Protective Coatings

3663 N. Clovis Avenue
Fresno, California 93727
Phone: (559) 291-0664

ICI Paints

6679 N. Blackstone
Fresno, California 93710
Phone: (559) 439-6200

Husky Corporation

2325 Husky Way
Pacific, Missouri 63069
Phone: (800) 325-3558

**Modern Custom Fabrication
SuperVault Protected AST**

2421 E. California Avenue
Fresno, California 93721
Phone: (800) 800-8268

**ConVault® Incorporated
ConVault® AST**

4109 Zeering Road
Denair, CA 95316
Phone: (800) 222-7099
<http://www.convault.com>.

**Steel Tank Institute
Fireguard Protected AST**

944 Donata Court
Lake Zurich, Illinois 60047
Phone: (847) 438-8265

Manufacturers of Fireguard Protected ASTs can be found at:

<http://www.steeltank.com/FindaFabricator/tabid/55/Default.aspx>

**Standing Loss Control Vapor Recovery System
Installation, Operation and Maintenance Manual for Existing Installations of
Aboveground Storage Tanks**

Table of Contents

<u>Equipment</u>	<u>Figure</u>	<u>Starts on Page</u>
Summary of Maintenance Required of the Standing Loss Control Vapor Recovery System		1
Installation Check List		2
Exhibit 1 Equipment Checklist		4
Pressure/Vacuum Vent Valve		
Husky 5885	A-1	5
White Paint		
PPG High Performance Coatings	B-1	8
Ponderosa Paint Company, Inc	B-2	10
ICI Devoe Devthane	B-3	14
Protected Aboveground Storage Tanks		
Modern Custom Fabrication SuperVault MH Series	C-1	18
Steel Tank Institute Fireguard Protected AST	C-2	33
ConVault® AST	C-3	39

Summary of Maintenance Required of the Standing Loss Control Vapor Recovery System

Component	Interval	Maintenance To Be Performed
Pressure/Vacuum Vent Valve Husky 5885	Annual	<ol style="list-style-type: none"> 1. Remove screws that hold on the top cover. Do not remove the screens. 2. Remove any debris from inside the lower cover 3. Check the drain holes in the lower cover. 4. Reinstall the top cover 5. Tighten the screws firmly
White Paint PPG High Performance Coatings Ponderosa Paint Company ICI Devoe Devthane	Annual	<ol style="list-style-type: none"> 1. Wash the surface of the aboveground storage tank with soap solution and rinse with water 2. Visually inspect painted surface for signs of wear including but not limited to discoloration, peeling, chipping, thinning, or other areas where paint is not adhering to the aboveground storage tank surface. 3. If signs of wear are observed, prepare surface of aboveground storage tank and re-apply white paint per the manufacturer's specifications
Modern Custom Fabrication SuperVault MH Series Aboveground Storage Tanks	Weekly	<ol style="list-style-type: none"> 1. Check the operation of the emergency vents for free movement and no obstructions 2. Spill pan should be clean and free of obstructions 3. Check tank monitoring device if equipped 4. Inspect surface (paint) of tank for chips or corrosion

Steel Tank Institute Fireguard Protected Aboveground Storage Tanks	Periodically	<ol style="list-style-type: none"> 1. Inspect proper drainage around the AST area 2. Inspect the tank exterior to ensure the integrity of the coating
	Monthly	<ol style="list-style-type: none"> 1. Inspect for the presence of water at the lowest possible points inside the primary tank
ConVault® Incorporated ConVault® AST	Periodically	<ol style="list-style-type: none"> 1. Check leak detector for indication of fluid in interstice (if applicable) 2. Check for small cracks and any signs of leakage 3. Check readability of signs and decals
	Monthly	<ol style="list-style-type: none"> 1. Check for water in the primary tank bottom under the fuel

(End of maintenance table.)

¹ These maintenance requirements shall not circumvent use of the manufacturer's installation and maintenance instructions. Maintenance contractors or owner/operators shall refer to the manufacturers complete installation and maintenance instructions found herein to ensure that all maintenance requirements are met. Maintenance must be conducted within the interval specified from the date of installation and at least within the specified interval thereafter.

Standing Loss Control EVR Installation Equipment Check List **Installing Products per ARB Executive Order VR-301-A**

Site Location :*(name)* _____

Address: _____

City/State: _____

Contact/Phone: _____

Installing Contractor :*(name)* _____

Address: _____

City/State: _____

Contact/Phone: _____

Tank Number: _____ Product: _____ Capacity: _____

Tank Number: _____ Product: _____ Capacity: _____

Tank Number: _____ Product: _____ Capacity: _____

Installing Technician: *(name)*: _____

Technician Certification Number: _____

Signature: _____

Yes/No	Initials

1. Is all of the installed equipment for Standing Loss Control EVR listed in ARB Executive Order (E.O.) VR-301-B?

Note: All Standing Loss Control Vapor Recovery installed equipment must be listed in E.O. VR-301-B. See attached Exhibit 1 Checklist, and /check each item installed.

Yes/No	Initials

2. Pressure Vacuum Vent Valve – Is there a P/V Vent valve installed on the top of each (gasoline) vent pipe (a maximum of three EVR P/V valves per GDF) or manifold?

a. P/V vent valve(s) torqued to _____ ft. lbs.

Yes/No	Initials

3. White Paint – Has the aboveground storage tank surface been prepared according to the white paint manufacturer's specifications?

a. Describe surface preparation: _____

Yes/No	Initials

4. White Paint – Has a certified white paint been applied to the surface of the aboveground storage tank according to the manufacturer’s specifications?

a. Describe the application technique: _____

Yes/No	Initials

5. Modern Custom Fabrication SuperVault MH Series – Has the SuperVault AST been installed with the proper pressure/vacuum vent valve?

a. Describe any issues: _____

Yes/No	Initials

6. Steel Tank Institute Fireguard Protected AST – Has the Fireguard AST been installed with the proper pressure/vacuum vent valve?

a. Describe any issues: _____

Yes/No	Initials

7. ConVault® AST – Has the ConVault® AST been installed with the proper pressure/vacuum vent valve?

a. Describe any issues: _____

Standing Loss Control Vapor Recovery System Exhibit 1 Equipment Checklist

From the list below, check the box for each component you used:

Pressure/Vacuum Vent Valve

☐ Husky 5885

White Paint

☐ PPG High Performance Coatings, Durethane

☐ Ponderosa Paint Company, Enviro-Clad

☐ ICI Devoe High Performance Coatings, Devthane


Protected Aboveground Storage Tanks

☐ Modern Custom Fabrication SuperVault MH Series

☐ Steel Tank Institute Fireguard Protected AST

☐ ConVault® Incorporated ConVault® Protected AST

Figure A-1
Husky Model 5885 2-Inch Threaded Pressure/Vacuum Vent Valve

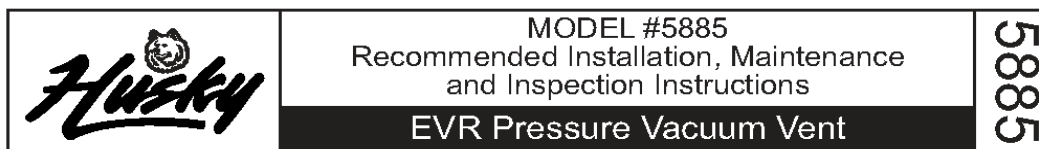

WARNING Designed for use at motor fuel dispensing facilities only.

INSTALLATION INSTRUCTIONS

NOTE: Always adhere to installation / usage instructions and warnings. Improper use may result in injury, damage or hazardous spill.

1. Remove the vent from the carton and visually inspect for any shipping damage.
2. Apply fuel resistant pipe sealant to the threads on the 2" vent stack.
3. Screw the Pressure Vacuum (P/V) vent onto the vent stack and tighten to a range of 20 to 50 ft-lbs with a suitable wrench.
4. DO NOT OVERTIGHTEN

TESTING / MAINTENANCE / INSPECTION

Testing Criteria Per TP201.1E and Exhibit 3 of applicable Phase 1 E.O.

Leak rate: Pressure = .05 CFH @ 2" wc, Vacuum = .21 CFH @ -4" wc.
 Cracking Pressure = 2 1/2" to 6" wc, Vacuum = -6" to -10" wc.



Annually Inspect the P/V vent valve for foreign objects:

1. Remove the screws that hold on the top cover. Do not remove the screens.
2. Remove any debris from inside the lower cover.
3. Check the drain holes in the lower cover.
4. Reinstall the top cover.
5. Tighten the screws firmly.



- All drive aways, maintenance and inspection activities must be logged using the serial number of the individual product.
- Apply city, state, or federal testing regulations as appropriate.

**ANY TEST / INSPECTION
 FAILURE REQUIRES IMMEDIATE
 EQUIPMENT REPLACEMENT OR
 REMOVAL FROM SERVICE.
 MADE IN THE USA**

Husky Corporation • 2325 Husky Way • Pacific, MO 63069 • Phone: (800) 325-3558 • Fax: (636) 825-7300 • www.husky.com

Installation, Operation and Maintenance Manual, Executive Order VR-301-B
 Standing Loss Control Vapor Recovery System for Existing Installations of Aboveground Storage Tanks

Figure A-1 (continued)
Husky Model 5885 2-Inch Threaded Pressure/Vacuum Vent Valve

 ALWAYS ADHERE TO INSTALLATION / USAGE INSTRUCTIONS AND WARNINGS. 	
Improper use may result in injury, damage, or hazardous spill.	
GENERAL WARNINGS / INSTRUCTIONS	
<ul style="list-style-type: none"> • Use of equipment is at individuals' own risk. • Always abide and adhere to city, state, and federal regulations regarding use and installation of dispensing equipment. • Always follow the dispenser manufacturer's instructions. • Always turn off all power to dispenser during maintenance and inspection activities. • Always close the shear valves during maintenance and inspection activities. • Always relieve pressure from system prior to performing maintenance activities. • Always check continuity after installation using a megohmmeter (Refer to PEI RP 400 for details). • Always replace or remove from service damaged or leaking dispensing equipment immediately. • Always report leaks / spills / accidents to appropriate authorities. • Always wear appropriate safety equipment during maintenance activities. • Always have appropriate fire extinguishing equipment within 5 feet of dispensers. • Always use pipe sealant approved for gasoline service. 	<ul style="list-style-type: none"> • Always place containers on the ground before filling. • Always discharge static electricity before using or servicing equipment by touching a metal part of the dispenser before and after fueling vehicle. • Never smoke within 20 feet of dispensers. • Never keep in service past recommended life. • Never leave the nozzle unattended while dispensing fuel. • Never use sparking or flaming devices within 20 feet of dispensers. • Never use power tools near dispensers or to aid in the installation process. • Never use cell phone within 20 feet of dispensers. • Never reenter car when fueling vehicle. • Never allow gasoline to touch eyes or skin. • Never use at flow rates in excess of regulatory guidelines. • Never use at flow rates less than 5 gallons per minute. • Never dispense flammable material into unapproved containers. • Never dispense fuel without a valid driver's license.

**CAUTION: DO NOT ALTER OR COVER
THE P/V VENT**

Figure A-1 (continued)
Husky Model 5885 2-Inch Threaded Pressure/Vacuum Vent Valve


TROUBLESHOOTING GUIDE

- | | |
|--------------------------------|--|
| Pressure Decay Test Failure... | 1. Test vent to CARB TP201.1E.
2. Replace vent. |
|--------------------------------|--|

For stations with ISD monitoring

- | | |
|---|--|
| Vapor leak... | 1. Verify other equipment is not the cause.
2. Test vent to CARB TP201.1E
3. Replace vent. |
| Exceeds allowable system cracking pressure... | 1. Replace vent |

GENERAL TECHNICAL DATA

Fuel Type	Test and warranty for gasoline and diesel fuel
Body	Sand cast aluminum
Screens	Stainless Steel 40 mesh
Seal	Nitrile Foam
Covers	Aluminum
Weight	1.2 lbs
Threads	2" NPT
Case Quantity	20
Listings	CARB 
Patents	5,957,157

ACCESSORIES

Part #5041
3" to 2" Threaded Adaptor

Installation Procedure:

1. Visually inspect the o-ring and threads for chips, dirt & debris.
2. Apply fuel resistant pipe sealant to the 3" NPT threads of the vent pipe.
3. Screw the P/V vent adaptor onto the vent stack by hand.
4. Apply fuel resistant pipe sealant to the 2" NPT threads of the P/V vent adaptor.
5. Screw the P/V vent onto the adaptor and tighten to a range of 20 to 50 ft-lbs. with a suitable wrench. Do not overtighten.

Part #5426
Test Adaptor

NOTE: This adaptor is designed to fit on the inlet of the P/V Vent to allow for field and lab tests.

Installation Procedure:

1. Screw P/V Vent adaptor into the P/V Vent valve until hand tight. Make sure the seal is compressed.
2. Place the P/V Vent valve and adaptor on a flat surface.
3. Attach a 3/16" hose (Tygon fuel tubing) from test apparatus to hose barb on the side of the adaptor.
4. After testing, remove hose from barb and remove adaptor from vent.

Figure B-1

PPG High Performance Coatings Durethane DTM Urethane Mastic

DURETHANE® DTM

95-3300 Series

HPC/Industrial Maintenance

DURETHANE® DTM Urethane Mastic

GENERAL DESCRIPTION

DURETHANE® DTM is a surface tolerant, high solids, high build, two component acrylic urethane formulated for direct-to-metal applications. This product is compliant for applications in areas with VOC requirements of less than 250 g/L (2.08 lbs./gal.).

RECOMMENDED USES

Aluminum
Ferrous Metal
Galvanized Steel
Masonry, Concrete Stucco, Plaster

FEATURES AND BENEFITS

Direct-to-Metal Application, including tightly adhering rust
Low VOC
Superior gloss and color retention
Easy to mix and apply by air or airless spray, brush or roller
Excellent UV stability
Infinite color capability
Surpasses Level 3 of SSPC-36 paint specification
Can earn LEED NC Version 2.2. Credits

PACKAGING

Comp A (95-3300 and 95-3301) are available in 1-Gallon (3.78L) and 5-Gallon (18.9 L) containers.

Comp B (95-339) is available in 1 Quart (946 mL) and 1-Gallon (3.78L) containers.

Not all containers are full-filled.

TINTING AND BASE INFORMATION

95-3300 Neutral Base up to 18 fl. oz.
95-3301 White Base up to 8.0 fl. oz.
95-339 Component B (do not tint)

Use formulas from the DURETHANE® DTM section of the formula book. Use only PERFORMACOLOR® 4257 line colorants.

PRODUCT DATA

GLOSS: 85 minimum (60° meter)
VOC: 2.01 lbs./gal. (241 g/L)
COVERAGE: 281 sq. ft./gal. @ 4 mils
(24.2 sq. m/3.78L)

Note: Coverage does not include loss due to varying application method, surface profile or mixing.

DFT: 3.0 minimum to 5.0 maximum mils

WEIGHT/GALLON*: 11.3 lbs. +/- 0.3 lbs. (136 g)

VOLUME SOLIDS*: 85.2% +/-2%

WEIGHT SOLIDS*: 74.3% +/-2%

FILM THICKNESS:

Dry Mils*: 3.0 to 5.0

Dry Microns: 76.2 to 127

Wet Mils*: 4.6 to 7.7

Wet Microns: 116.8 to 195.6

MIX RATIO: 5 parts Comp. A to 1 part Comp. B

Results will vary by color, thinning and other additives.

*Product data calculated on mixed product 95-3301 mixed with 95-339.

POT LIFE: 3 hours @ 77°F (25°C)

INDUCTION TIME: None

CLEAN UP: 97-727, 97-730, 97-735

FLASH POINT: 95-3300/3301 86°F (30°C)

95-339: 331°F (166°C)

DRYING SCHEDULE

Per ASTM D5895, air dry @ 50% relative humidity.

Drying times listed may vary depending on temperature, humidity, color and air movement.

With 97-722 Accelerator			
	90°F (32°C)	77°F (25°C)	40°F (4.4°C)
Dry to Touch:	<1 hour	<1 hour	1 hour
Dry Through:	<1 hour	<1 hour	4 hours
Dry to Recoat:	When dry through	When dry through	When dry through

Without 97-722 Accelerator			
	90°F (32°C)	77°F (25°C)	40°F (4.4°C)
Dry to Touch:	1 hour	2 hours	4 hours
Dry Through:	3 hours	3.5 hours	>24 hours
Dry to Recoat:	When dry through	When dry through	When dry through

G10

Figure B-1 (continued)

PPG High Performance Coatings Durethane DTM Urethane Mastic

DURETHANE® DTM

95-3300 Series

DURETHANE® DTM Urethane Mastic

HPC/Industrial Maintenance

GENERAL SURFACE PREPARATION

The service life of the coating is directly related to the surface preparation. The surface to be coated must be dimensionally stable, properly prepared, dry, clean and free of contamination. SSPC-SP2 Hand Tool or SSPC-SP3 Power Tool Cleaning is minimum. For best performance, SSPC-SP6 (NACE #3) Commercial Blast Cleaning is recommended. **WARNING!** If you scrape, sand, or remove old paint, you may release lead dust or fumes. LEAD IS TOXIC. EXPOSURE TO LEAD DUST OR FUMES CAN CAUSE SERIOUS ILLNESS, SUCH AS BRAIN DAMAGE, ESPECIALLY IN CHILDREN. PREGNANT WOMEN SHOULD ALSO AVOID EXPOSURE. Wear a properly fitted NIOSH-approved respirator and prevent skin contact to control lead exposure. Clean up carefully with a HEPA vacuum and a wet mop. Before you start, find out how to protect yourself and your family by contacting the USEPA National Lead Information Hotline at 1-800-424-LEAD or log on to www.epa.gov/lead. In Canada contact a regional Health Canada office. Follow these instructions to control exposure to other hazardous substances that may be released during surface preparation.

PREVIOUSLY PAINTED SURFACES: Old coatings should be tested for adhesion of the existing system and lifting by the proposed top-coat.

RECOMMENDED PRIMERS

DURETHANE® DTM Mastic is self-priming. Aggressive environmental conditions or heavily rusted substrates require the use of a primer.

94-109	Epoxy Fast Dry Primer
97-946	All Weather DTR
97-145	PITT-GUARD® DTR
98-46	AQUAPON® WB

LIMITATIONS OF USE

Apply only when air, product and surface temperatures are at least 40°F (4°C) and surface temperature is at least 5°F (3°C) above the dew point. Drying times listed may vary depending on temperature, humidity and air movement. Do not apply material which has been mixed for more than three hours as loss of gloss uniformity will occur. Excess film thickness may lead to air entrapment or pinholing in the film. For Professional Use Only; Not Intended for Household Use.

MIXING AND APPLICATION INFORMATION

Mix Component "A" thoroughly before blending. (If 97-722 Accelerator is used, add it to the "A" Component and mix well prior to the addition of the "B" Component. Add up to 6 oz. of 97-722 per mixed gallon). Add Component "B" to Component "A" and mix well. A mechanical mixer is recommended.

Application Equipment: Changes in application equipment, pressures and/or tip sizes may be required depending on ambient temperatures and application conditions.

Conventional Spray: Fluid Nozzle: DeVilbiss MBC gun with 704 or 777 air cap with E or F tip and needle, or equivalent equipment. Atomization Pressure: 55-70 psi. Fluid Pressure: Can not specify dependent on numerous factors.

Airless Spray: Equipment capable of maintaining a minimum of 2500 psi at the tip without surge. 1500 psi minimum at the tip without surge. Tip size: 0.013" - 0.017" (0.331 - 0.443 mm) orifice. Spray equipment must be handled with due care and in accordance with manufacturer's recommendation. High-pressure injection of coatings into the skin by airless equipment may cause serious injury.

PPGAF believes the technical data presented is currently accurate; however, no guarantee of accuracy, comprehensiveness, or performance is given or implied. Improvements in coatings technology may cause future technical data to vary from what is in this bulletin. For complete, up-to-date technical information, visit our web site or call 1-800-441-9695.



PPG Industries, Inc.
Architectural Coatings
One PPG Place
Pittsburgh, PA 15272
www.ppghpc.com

Technical Services
1-800-441-9695
1-888-807-5123 fax

Architect/Specifier:
1-800-PPG-IDEA

PPG Architectural Finishes
400 S. 13th Street
Louisville, KY 40203

PPG Canada, Inc.
Architectural Coatings
4 Kenview Blvd
Brampton, ON L6T 5E4

G10 6/2007
(Supersedes 10/2006)

MIXING AND APPLICATION INFORMATION (cont.)

Brush: High Quality Natural Bristle Brush

Roller: High Quality 3/8" nap roller cover with a solvent resistant core.

Thinning: Thinning not normally required. For 2.08 lbs./gal (250 g/L) VOC, thin up to 5% by volume with 97-739 Exempt Thinner. 97-735 can be added up to 5% by volume, for brush, roll or spray application where VOC regulations allow.

Permissible temperatures during application:

Material:	40 to 90°F	4 to 32°C
Ambient:	40 to 100°F	4 to 38°C
Substrate:	40 to 130°F	4 to 54°C

SAFETY

Proper safety procedures should be followed at all times while handling this product. Explosion-proof equipment must be used when coating with these materials in confined areas. Keep containers closed and away from heat, sparks, and flames when not in use. USE WITH ADEQUATE VENTILATION. KEEP OUT OF REACH OF CHILDREN. Read all label and Material Safety Data Sheet for important health/safety information prior to use. MSDS are available through our website www.ppghpc.com or by calling 1-800-441-9695.

Figure B-2
Ponderosa Paint Company, Inc., Enviro-Clad 2600 DTM/Urethane



TECHNICAL BULLETIN

2600 SERIES DTM URETHANE MASTIC

TYPE: Aliphatic Acrylic Polyurethane Mastic

INTENDED USE: A rust preventative coating for mobile equipment, tankage substrates and structural steel.

FOR INDUSTRIAL USE ONLY

CHEMICAL RESISTANCE: Resistance to dry heat up to 150° F depending on color. Excellent resistance to weather, moisture, oil spills, and petroleum. Excellent resistance to solvents and chemical fumes.

SURFACE PREPARATION: Dependent on coating use. Refer to SURFACE PREPARATION Section.

APPLICATION: Apply by brush, roller, air assisted airless, HVLP, or conventional spray (where local regulations permit).

COLORS: Standard shop colors. Custom matches available upon request.

RECOMMENDED FILM THICKNESS: Up to 10.0 mils DFT

FILM THICKNESS PER COAT

SPRAY: 3 to 5 mils DFT

BRUSH OR ROLLER: 3 to 5 mils DFT.

THEORETICAL COVERAGE at 1 mil: 1574 sq. ft. per gallon, depending on color. The actual coverage will be less, depending on application technique, job conditions, and type of surface to be coated.

DRYING TIMES at 77° F (25°C):

Between coats: 70 minutes max. **Tack Free:** 3½ hours
Tape: 7 hours **Print Free:** 8 hours

Dust Free: 5 hours
Force Dry at 140°F: 4 hours after tack free.

CURING TIME: Cures in room temperature in about 7 days. Can be accelerated with PPC 's Liquid Lightening if desired.

Figure B-2 (continued)
Ponderosa Paint Company, Inc., Enviro-Clad 2600 DTM/Urethane

OVERCOATING TIME

MINIMUM: 24 hours

MAXIMUM: De-gloss and recoat. No special preparation is necessary.

PHYSICAL SPECIFICATIONS

PIGMENTS: Chemical resistant.

SOLIDS: Average of 98% by wt. and 96% by volume, depending on color.

POT LIFE (at 77°F): 45 minutes at 77°F (25°C) when catalyzed. Avoid moisture contamination.

SHELF LIFE: 24 months without catalyst. Watch for separation in extreme heat and cold.

SHIPPING WEIGHT (approximate due to color, fill level, pigment):

2600: Gallon – 9.15 lbs.

Catalyst: ½ gallon – 4.15 lbs.

MIXING RATIO: 1 parts 2600 to 0.6 parts 2600 catalyst.

GLOSS: Super High Gloss

AREA OF USAGE

Recommended for tankage steel, trailer, fleet, and OEM. Recommended for areas where good chemical and/or weathering resistance is desired.

CHEMICAL RESISTANCE

• Water • Salt • Acids • Alkalis • Solvents •

NOTE: Although 2600 SERIES exhibits resistance to the above environments, this list is not meant to imply an express guarantee in actual service. It is recommended that the user contact Ponderosa Paint Company for specific recommendations when severe exposure is expected.

THINNERS

No thinning is required.

SPRAY APPLICATION: No thinning is required for most spray applications. If necessary, thin 11% by volume with PPC's Envirosol. Envirosol is a zero VOC reducer. Envirosol T-601 slow, T-602 medium, T-603 fast. (Note: always thin after adding catalyst.)

BRUSH OR ROLLER APPLICATION: Usually, no thinning necessary.

SURFACE PREPARATION

STEEL: Apply urethane over clean, oil and moisture free substrate. Before hand tool or power tool cleaning, visible deposits of oil, grease, or other materials that may interfere with coating adhesion shall be removed in accordance with SSPC-SP 1. Use either hand tool cleaning (SSPC-SP 2) or power tool cleaning (SSPC-SP 3) methods to remove loose mill scale, loose rust, loose paint and other loose detrimental foreign matter. After cleaning remove dirt, dust or similar contaminants from the surface by brushing, blowing off with clean air, or

vacuum cleaning. Treat already painted surfaces as a primed surface.

CONCRETE: Concrete must be properly cleaned and primed, depending on surface use and condition. Contact Ponderosa Paint Company for specific recommendations.

Figure B-2 (continued)
Ponderosa Paint Company, Inc., Enviro-Clad 2600 DTM/Urethane

EQUIPMENT

SPRAY APPLICATION

1. All spray equipment should be thoroughly cleaned and the hose, in particular, should be free of old paint film and other contaminants.
 2. Air Pressure:

HVLP	10 psi at the air cap
Conventional	45-55 psi at the gun
Air-Assisted HVLP	10 psi at the gun
 3. When air-assisted airless spray equipment is used, the recommended liquid pressure is 2100 to 3300 psi with a tip size from .011" to .015".
- Gun Setup:
1.4-1.7 mm or equivalent

ROLLER APPLICATION

Lambskin $\frac{3}{8}$ " nap or Mohair $\frac{1}{4}$ " nap

BRUSH APPLICATION

Quality China bristle brush.

READ THIS NOTICE

SAFETY AND MISCELLANEOUS EQUIPMENT

1. **CATALYST WARNING! REACTS VIOLENTLY WITH COMMON MATERIALS INCLUDING WATER, ALCOHOLS, BASES AND AMINES. EYE IRRITANT. TOXIC IF INHALED. POSSIBLE SENSITIZER.** Skin contact may aggravate existing skin disease. Eye and skin irritant. May be harmful if absorbed through the skin. May cause allergic reaction. May be harmful if inhaled. May cause shortness of breath, headache, nausea, vomiting, and respiratory tract irritation. May be harmful if swallowed.
2. **INDIVIDUALS WITH LUNG OR BREATHING PROBLEMS OR PRIOR REACTION TO ISOCYANATES MUST NOT BE EXPOSED TO VAPOR OR SPRAY MIST.** Wear an appropriate, properly fitted respirator (NIOSH approved) during application unless air monitoring demonstrates vapor or spray/mist levels are below applicable limits. An airline respirator (NIOSH approved) is required in work environments where isocyanate airborne concentrations are expected to exhibit considerable and sudden variations such as in spray type application. Follow respirator manufacturer's directions for respirator use. Do not get in eyes and use proper hygiene.
3. **CAUTION-** Read and follow all caution statements on this product technical bulletin, material safety data sheet and container label for this product.

MIXING

2600 series urethane enamel comes in a two-component package. The coating and the curing agent, 2600 Catalyst, are mixed at a 1: 0.6 ratio. Combine full containers for correct mix ratio. If thinning, add up to three cups of Envirosol. PPC's Envirosol is a zero VOC reducer. 2600 is an almost 100% solids product and needs to be mixed thoroughly to insure a good reaction.

NOTE: Always thin after adding catalyst.

APPLICATION PROCEDURE

- 1) Surface should be dry and clean. Free of dirt, grease, old loose scaling paint and anything that might interfere with adhesion. The surface preparation method selected will depend on the required degree of cleanliness defined by SSPC specifications. For surfaces that are pitted or scratched, a primer is recommended to achieve a smooth, more uniform appearance. We suggest either PPC's 7600, an epoxy primer, or PPC's 7500, an organic zinc primer.


Figure B-2 (continued)
Ponderosa Paint Company, Inc., Enviro-Clad 2600 DTM/Urethane

- 2) In order to assure that the same color is achieved consistently, make sure to stir well before using. If any pigment settling is evident, break it loose with a stirring stick and continue to mix until the product is consistent.
- 3) Once desired color has been achieved, the coating is ready for use. For roller application spread the product by rolling back and forth using a "W" pattern until the product is evenly distributed. Then back roll the section.
- 4) If spraying HVLP air atomizing spray equipment is recommended for application. A fluid pressure of 3-15 psi and atomizing gauge pressure of 45-65 psi are recommended.
- 5) When the part is completely coated and no more parts are to be finished, clean up all equipment that has been used with gun wash solvent. This material has a 1-hour pot life after mixing. Any unused paint and all mixing and application equipment must be flushed and cleaned within 15 minutes after mixing or use.
- 6) Refer to appropriate Material Safety Data Sheets and applicable local, state and federal laws for handling and disposal questions.

INSPECTION

Degree of surface preparation and film thickness shall conform to appropriate specifications outlined in SURFACE PREPARATION and RECOMMENDED FILM THICKNESS sections.


Figure B-3
ICI Devoe Devthane High Performance Coatings



DEVTHANE® 359H

DTM High Build Gloss Aliphatic Urethane Mastic

Cat. # 359FXXXX/379C0910



PRODUCT DESCRIPTION
SPECIFICATION DATA

Generic: Acrylic Aliphatic Urethane

General Description: A high build, low VOC, high performance, chemically-cured aliphatic urethane gloss enamel for use in areas where maximum gloss & color retention are required.

Typical Uses: For use on properly prepared steel, concrete or steel floors, masonry, drywall, plaster, metal, concrete block, galvanized, aluminum, poured concrete, and glazed brick. Ideal for use on exterior or interior structural steel, piping, metal buildings, control cabinetry, conveyors, pumps, storage tanks, motors, machinery, and transportation vehicles. Can also be used in the hard service areas of food processing plants, dairies, schools, restaurants, hospitals, correctional facilities, factories, stadiums, arenas, and amusement parks.

Color: Available in white, black and a full range of custom colors
Finish: High Gloss
Reduction Solvent: T-9 for spray, T-17 for brush or roller
Clean-up Solvent: T-9 Thinner
Weight/Gallon: 10.2 lbs./gal. (1.23 kg/L) – varies with color
VOC (EPA 24): 1.91 lbs./gal. (229 g/L) – varies with color
Solids By Volume (ASTM 2697-7 days): 72% ± 2%
Theoretical Coverage at 1.0 Mil (25 microns) Dry: 1116 sq. ft., (27.3 m²/L)
Recommended Film Thickness: 4.0-6.0 mils (100-150 microns) dry – 5.8-8.6 mils (145-216 microns) wet. Direct to metal application requires a dry film thickness of 5-6 mils (125-150 microns)
Systems: Please consult the appropriate system guide, the particular job specification or your ICI Paints Representative for proper systems using this product. Systems must be selected considering the particular environment involved.
Minimum Dry Time (ASTM D 1640): 4 mils (200 microns) DFT

Substrate Temperature	70°F (21°C)
Minimum Recoat Dry Hard	6 Hours 24 Hours
Maximum Recoat Self	2 Weeks

Ventilation, film thickness, humidity, thinning, and other factors can influence the rate of dry.
Warning: The above table provides general guidelines only. Always consult your ICI Paints Representative for appropriate recoat windows since the maximum aged recoat time of this product may be significantly shortened or lengthened by a variety of conditions, including, but not limited to humidity, surface temperature, and the use of additives or thinners. The use of accelerators or force curing may shorten the aged recoat of individual coatings. The above recoat windows may not apply if recoating with a product other than those listed above. If the maximum aged recoat window is exceeded, please consult your ICI Paints Representative for appropriate recommendations to enhance adhesion. Failure to observe these precautions may result in intercoat delamination.
Shelf Life: Over 12 months at 77°F (25°C) – unopened
Mix Ratio By Volume: 4 (base): 1 (converter) – see mixing instructions.
Induction: None
Pot Life: 3 hours @ 77°F (25°C) & 50% R.H.

FEATURES
PERFORMANCE DATA

Advantages:

- Excellent gloss and color retention
- Excellent abrasion and chemical resistance
- VOC less than 250 g/L
- Easily applied by brush, roller or spray
- Wide color selection, including safety colors
- Excellent resistance to marring, chipping, and scratching
- High Build
- Excellent application properties
- May be used direct to metal
- Ready mix colors contain no organic HAPS

Limitations of Use: Color may change as temperature approaches 250°F (121°C) limit, but the film will remain intact.

Adhesion: (ASTM D 4541) – Excellent
Salt Spray Resistance: (ASTM B 117) – Excellent
Abrasion Resistance: (ASTM D 4060) – Excellent
Humidity Resistance: (ASTM D 2247) – Excellent
Service Temperature Limits: 250°F (121°C) dry
Hardness: (ASTM D 3363), 7 day cure @ 77°F (25°C) – HB-F

Chemical Resistance: (ASTM D 1308 – 24 hr. contact) Excellent. Resists splash and spillage of alkalis, salts, moisture, oils, greases, foodstuffs and detergents.
Stain Resistance: (ASTM D 1308 – 1 week contact) Excellent. Resists stains such as crayon, lipstick, coffee, soil medium, shoe polish, grape juice, ink pen, marker, and spray paint.

DANGER! FLAMMABLE. HARMFUL OR FATAL IF SWALLOWED. Read label and Material Safety Data Sheet Prior to Use. See other cautions on last page. DSF3-0696

9 FINISHES
SPECIAL COATINGS (9800)

DEVVOE COATINGS

DEVVOE
HIGH PERFORMANCE
COATINGS

DEVVOE COATINGS

9 FINISHES
SPECIAL COATINGS (9800)

09800

Figure B-3 (continued)

ICI Devco Devthane High Performance Coatings

Back Page: 359FXXX/379C0910

GENERAL SURFACE PREPARATION

All surfaces must be sound, clean, dry, and free of oil, grease, mildew, form release agents, curing compounds, laitance, and other foreign matter. To insure the best appearance, the primer or undercoat should be smooth and free of any surface defects such as runs, dry spray or heavy orange peel. **Use only VOC compliant products for California.**

New Surfaces: Steel –For direct to steel application, abrasive blast to near-white metal surface cleanliness in accordance with SSPC-SP-10 or ISO-Sa2 1/2. Blast profile on steel should be 1.5 to 2.5 mils (38-63 microns) in depth and be of a sharp, jagged nature as opposed to a "peen" pattern (from shot blasting) or clean and prime with DEVRAN® 224HS, BAR-RUST® 231, BAR-RUST 235 or BAR-RUST 233H Epoxy. **Concrete Block** – Fill with DEVRAN 224HS, BAR-RUST 235, BAR-RUST 233H Epoxy, TRU-GLAZE-WB™ 4015 or BLOXFIL® 4000 block fillers. **Fiberglass** – Solvent wipe, scuff sand and solvent wipe again. Prime with DEVRAN 201. **Concrete Floors, Poured Concrete** – Cure at least 30 days. Acid etch or abrasive blast slick, glazed concrete or concrete with laitance. Prime with DEVRAN 224HS, BAR-RUST 235 or BAR-RUST 233H or use PRE-PRIME™ 167 Penetrating Sealer. **Drywall** –Prime with a premium acrylic latex vapor barrier primer.

Galvanized Steel and Aluminum –Remove dirt and oils by solvent cleaning or with DEVPREP® 88 Cleaner followed by a thorough water rinsing. Prime with DEVRAN 203 epoxy primer. For direct to metal use, brush-off blast in accordance with SSPC-SP-7 to create a surface profile.

Previously Painted Surfaces: Remove loose and peeling paint. Scuff sand glossy areas. Old coatings should be tested for lifting and bleeding. If they lift or bleed, remove them. Prime bare areas with a primer specified under **New Surfaces**.

WARNING! If you scrape, sand, or remove old paint, you may release lead dust. LEAD IS TOXIC. EXPOSURE TO LEAD DUST CAN CAUSE SERIOUS ILLNESS, SUCH AS BRAIN DAMAGE, ESPECIALLY IN CHILDREN. PREGNANT WOMEN SHOULD ALSO AVOID EXPOSURE. Wear a NIOSH approved respirator to control lead exposure. Clean up carefully with a HEPA vacuum and a wet mop. Before you start, find out how to protect yourself and your family by contacting the National Lead Information Hotline at 1-800-424-LEAD or log on to www.epa.gov/lead.

DIRECTIONS FOR USE

Tinting: Tint the appropriate base with CHROMA-CHEM® 844 colorants. (Do not use water based or other colorants.) Add colorants to only the base portion. Mix thoroughly before adding the converter portion. When using DEVTHANE® 359H enamel direct to metal, best results are obtained using ready mixed colors.

Thinning: Do not thin in California or other localities where VOC limit is 250 g/L. Where local regulations permit a VOC limit equal to or greater than 263 g/L, product may be thinned with up to 5% (by volume of the mixed material) of T-9 solvent. Small amounts (5% or less) of T-17 thinner will improve roller or brush applications.

Mixing: DEVTHANE 359H enamel is a two-component product supplied in 5 gallon or 1 gallon kits which contain the proper ratio of ingredients. The entire contents of each container must be mixed together. It is important that all mixing equipment is free of moisture and that moisture does not contaminate the coating. Mix the base portion to obtain a smooth, homogeneous condition. After mixing the base portion, add the converter slowly with continued agitation. Mix thoroughly. The pot life of the mixed material is 3 hours at 77° (25°C). Higher temperatures will reduce working life of the coating; lower temperatures will increase it. Avoid storing or placing containers in direct sunlight.

Application: Apply by airless spray, air spray, roller or brush. For airless spray, any air, electric, or gas operated airless sprayer capable of 3,000 psi (207 bars) and able to support a .015" to .019" tip sizes can be used. Multiple guns and long fluid lines require pumps with adequate capacity. For air spray application, use a professional grade gun, "E" or "D" Tip and 704 air cap or equivalent. Adjust fluid and air pressure to get a good spray pattern.

Note: Be sure all spray equipment and fluid lines are clean, and free of water or non-compatible solvents. For brush application, use good quality, dry, clean brushes. For roller application, use short nap, new rollers. Do not apply over wet surfaces or under very humid conditions where condensation or fog could settle on the coating during the cure process. Brushing and rolling may require multiple coats to achieve correct film thickness and/or hiding.

Spreading Rate: Apply at 186-279 sq. ft. per gallon (4.6-6.8 m²/L) depending on surface texture and porosity. Make allowance for any losses due to overspray or surface irregularities.

Dry Time (ASTM D 1640): At 70°F (21°C) & 50% R.H., dries to recoat in 6 hours and dries hard in 24 hours.

Clean-up: Use T-9 thinner.

Cure Acceleration: Urethane catalyst 070A0000 may be used to accelerate cure at or below 40°F (5°C). The addition of one or two ounces per gallon will decrease the dry hard time approximately one-third to one-half respectively at 40°F (5°C). The pot life will be reduced one-half to three-fourths.

PRECAUTIONS

DANGER! FLAMMABLE LIQUID AND VAPOR. HARMFUL OR FATAL IF SWALLOWED. ASPIRATION HAZARD - CAN ENTER LUNGS AND CAUSE DAMAGE. HARMFUL IF INHALED. MAY CAUSE CENTRAL NERVOUS SYSTEM EFFECTS, INCLUDING DIZZINESS, HEADACHE OR NAUSEA. CAUSES EYE, SKIN AND RESPIRATORY TRACT IRRITATION. MAY CAUSE ALLERGIC SKIN AND RESPIRATORY REACTION. OVEREXPOSURE MAY CAUSE BLOOD, LIVER, KIDNEY DAMAGE. USE ONLY WITH ADEQUATE VENTILATION. KEEP OUT OF THE REACH OF CHILDREN. NOTICE: Products in this series contain solvents. Reports have associated repeated and prolonged occupational overexposure to solvents with permanent brain and nervous system damage. Intentional misuse by deliberately concentrating and inhaling the contents may be harmful or fatal. For emergency information call (800) 545-2643. **Note: These warnings encompass the product series. Prior to use, read and follow product-specific MSDS and label information.** Keep away from heat, sparks and flame. **Do not** smoke. Vapors may ignite. Extinguish all flames, burners, stoves, heaters and pilot lights and disconnect all electrical motors and appliances before use and until all vapors are gone. Prevent build-up of vapors by opening all windows and doors to achieve cross-ventilation. If sanding is done, wear a dust mask to avoid breathing of sanding dust. Do not breathe vapors or spray mist. Ensure fresh air entry during application and drying. Avoid contact with eyes and skin. If you experience eye watering, headaches, or dizziness, leave the area. If properly used, a respirator may offer additional protection. Obtain professional advice before using. Close container after each use. **FIRST AID:** For skin contact, wash thoroughly with soap and water. If any product remains, gently rub with petroleum jelly, vegetable or mineral/baby oil then wash again with soap and water. Repeat as needed. Remove contaminated clothing. For eye contact, flush immediately with plenty of water for at least 15 minutes. **Get medical attention.** If swallowed, **get medical attention immediately.** If inhalation causes discomfort, remove to fresh air. If discomfort persists or breathing difficulty occurs, get medical attention. **KEEP FROM FREEZING.**

DS174-1005

SHIPPING

Flash Point: 80°F (27°C)
Packaging: 1 gallon kit (3.785L) 5 gallon kit (18.925L)
0.80 gallon base 4.00 gallon base
0.20 gallon converter 1.00 gallon converter

Shipping Weight: 4 - 1 gallon kits - 60 lbs. (27.2kg)
5 gallon kit - 66 lbs. (29.9 kg)

359H (05/07)
Ad Stock #67044A

*CHROMA-CHEM is a Registered Trademark of Degussa GmbH.



Strongsville, Ohio U.S.A.
800-654-2616
www.devcocoatings.com

LIMITATION OF LIABILITY: To the best of our knowledge, the technical data contained herein are true and accurate at the date of issuance but are subject to change without prior notice. We guarantee our product to conform to the specifications contained therein. WE MAKE NO OTHER WARRANTY OR GUARANTEE OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE. Liability, if any, is limited to replacement of the product or refund of the purchase price. LABOR OR COST OF LABOR AND OTHER CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED.

Figure B-3 (continued)
ICI Devoe Devthane High Performance Coatings



DEVTHANE® 379H

Aliphatic Urethane Gloss Enamel

Cat. # 379FXXXX/379C0910

PRODUCT DESCRIPTION

Generic: Aliphatic Acrylic Urethane

General Description: A high performance, low VOC two component chemically-cured aliphatic urethane gloss enamel for use in areas where maximum gloss & color retention are required.

Typical Uses: For use on properly prepared and primed steel, concrete or steel floors, masonry, drywall, plaster, metal, concrete block, galvanized aluminum, poured concrete, and glazed brick. Ideal for use on exterior or interior structural steel, piping, metal buildings, control cabinetry, conveyors, pumps, storage tank exteriors, motors, machinery, and transportation vehicles. Can also be used in the hard service areas of food processing plants, dairies, schools, restaurants, hospitals, correctional facilities, factories, stadiums, arenas, and amusement parks.

SPECIFICATION DATA

Color: White (tintable), ready-mixed & custom colors
Finish: Gloss (90 units @ 60°)
Weight/Gallon: 11.2 lbs./gal. (1.34 kg/L) – varies with color
VOC (TBAC Exempt): <100 g/L (0.83 lbs. / gal.)
VOC (TBAC Exempt): <100 g/L (0.83 lbs. / gal.) when thinned with # 800 VOC Compliant Reducer
VOC (TBAC Non-Exempt): < 250 g/L (2.08 lbs./gal.) when thinned 5% with T-9 or T-17 Thinner
Solids By Volume: 69% ± 2%
Theoretical Coverage at 1.0 Mil (25 microns) Dry: 1222 sq. ft./gal. (27.5 m²/L)
Recommended Film Thickness: 2.0-3.0 mils (50-75 microns) dry – 2.8-4.3 mils (70-105 microns) wet
Systems: Please consult the appropriate system guide, the particular job specification or your ICI Paints Representative for proper systems using this product. Systems must be selected considering the particular environment involved.
Minimum Dry Time (ASTM D 1640): 2 mils (50 microns) DFT

Substrate Temperature	40°F (4°C)	60°F (16°C)	80°F (27°C)	100°F (38°C)
Minimum Recoat	13 Hours	10 Hours	6 Hours	4 Hours
Dry Hard	>32 Hour	24 Hours	16 Hours	12 Hours
Maximum Recoat				
Self	2 Weeks	2 Weeks	2 Weeks	1 Week

Ventilation, film thickness, humidity, thinning, and other factors can influence the rate of dry.

Warning: The above table provides general guidelines only. Always consult your ICI Paints Representative for appropriate recoat windows since the maximum aged recoat time of this product may be significantly shortened or lengthened by a variety of conditions, including, but not limited to humidity, surface temperature, and the use of additives or thinners. The above recoat windows may not apply if recoating with a product other than those listed above. If the maximum aged recoat window is exceeded, please consult your ICI Paints Representative for appropriate recommendations to enhance adhesion. Failure to observe these precautions may result in intercoat delamination.

Shelf Life: Over 12 months at 77°F (25°C) – unopened.

Mix Ratio By Volume: 4 (base): 1 (converter) – see mixing instructions.

Induction: None – see mixing instructions.

Pot Life: 2.5 hours @ 77°F (25°C)

FEATURES

Advantages:

- Exceptional gloss and color retention
- Excellent abrasion and chemical resistance
- Higher solids and higher film build than typical urethane finishes
- VOC < 100 g/L (TBAC Exempt)
- Easily applied by brush, roller or spray
- Wide color selection, including safety colors
- Excellent resistance to marring, chipping, and scratching
- Contains ultraviolet light stabilizer
- Meets SSPC Paint 36, Level 3

Graffiti Resistance: Excellent resistance to most graffiti materials such as spray paint, magic markers and lipstick. Contact your ICI Paints Representative for more information.

Limitations of Use: Color may change as temperature approaches 250°F (121°C) limit, but the film will remain intact.

PERFORMANCE DATA

Adhesion: (ASTM D 4541) - Excellent
Salt Spray Resistance: (ASTM B 117) - Excellent
Abrasion Resistance: (ASTM D 4060) - Excellent
Humidity Resistance: (ASTM D 4585) - Excellent
Service Temperature Limits: 250°F (121°C) dry
Hardness: (ASTM D 3363), 7 day cure @ 77°F (25°C) – 4H

Chemical Resistance: (ASTM D 1308 – 24 hour contact) resists splash and spillage of alkalis, salts, moisture, oils, greases, foodstuffs and detergents.

Stain Resistance: (ASTM D 1308 – 1 week contact) Excellent. Resists stains such as crayon, lipstick, coffee, soil medium, shoe polish, grape juice, ink pen, marker, and spray paint.

DANGER! FLAMMABLE. HARMFUL OR FATAL IF SWALLOWED. Read label and Material Safety Data Sheet Prior to Use. See other cautions on last page. DSF3-0696

9 FINISHES
SPECIAL COATINGS (9800)

DEVVOE COATINGS



DEVVOE COATINGS

9 FINISHES
SPECIAL COATINGS (9800)

09800

Figure B-3 (continued) ICI Devco Devthane High Performance Coatings

GENERAL SURFACE PREPARATION

All surfaces must be sound, clean, dry, and free of oil, grease, mildew, form release agents, laitance, and foreign matter. To insure the best appearance, the primer or undercoat should be smooth and free of any surface defects such as runs, dry spray or heavy orange peel. **Use only VOC compliant products in California.**

New Surfaces: Clean and prime with DEVTRAN® 203, DEVTRAN 223, DEVTRAN 224HS, BAR-RUST® 231, BAR-RUST 231V, BAR-RUST 233H, BAR-RUST 233V, BAR-RUST 235H, or TRU-GLAZE-WB™ 4030 epoxy primers. **Concrete Block** - Fill with DEVTRAN 224HS, BAR-RUST 231, BAR-RUST 231V, BAR-RUST 233V, BAR-RUST 235H, or BAR-RUST 233H primers, TRU-GLAZE-WB 4015 or BLOXFIL® 4000 block fillers. **Fiberglass** - Solvent wipe, scuff sand and solvent wipe again. Prime with BAR-RUST 235H epoxy primer. **Concrete Floors, Poured Concrete** - Cure at least 30 days. pH must be 10.0 or lower before painting. Acid etch or abrasive blast slick, glazed concrete or concrete with laitance. Prime with DEVTRAN 224HS, BAR-RUST 231, BAR-RUST 231V, BAR-RUST 233H, BAR-RUST 235H, or TRU-GLAZE-WB 4030 epoxy primers, or use PRE-PRIME™ 167 Penetrating Sealer. **Drywall** - Prime with a premium acrylic latex vapor barrier primer-sealer. **Galvanized Steel and Aluminum** - Remove dirt and oils with DEVPREP® 88 cleaner or other suitable cleaner followed by a thorough water rinsing.

Prime with DEVTRAN 203 or TRU-GLAZE-WB 4030 epoxy primers. Galvanized substrates must be test patched for adhesion prior to use due to the high variability of surface treatments. Choice of primer depends on local VOC and air quality regulations.

Shop Applied Coatings: For coatings applied in shop situations only, depending on the substrate, the following primers may also be used: DEVTRAN 220S, and DEVTRAN 261 QCS epoxy primers. Consult the product data sheets for these primers for the appropriate uses.

WARNING! If you scrape, sand, or remove old paint, you may release lead dust. **LEAD IS TOXIC. EXPOSURE TO LEAD DUST CAN CAUSE SERIOUS ILLNESS, SUCH AS BRAIN DAMAGE, ESPECIALLY IN CHILDREN. PREGNANT WOMEN SHOULD ALSO AVOID EXPOSURE.** Wear a NIOSH approved respirator to control lead exposure. Clean up carefully with a HEPA vacuum and a wet mop. Before you start, find out how to protect yourself and your family by contacting the National Lead Information Hotline at 1-800-424-LEAD or log on to www.epa.gov/lead.

DIRECTIONS FOR USE

Tinting: Tint the appropriate base with CHROMA-CHEM® 844 colorants. (Do not use water based or other colorants.) Add colorants to only the base portion. Mix thoroughly before adding the converter portion.

Thinning: For compliance to VOC regulations, thin as follows: South Coast Air Quality Management District (SCAQMD): Thinning is not required, however, if thinning is desired, add # 800 VOC Compliant Reducer at no more than 10% by volume. Read and follow all hazard and precautionary information found on labels, data sheets and MSDS's. California outside of SCAQMD: Thinning is not required, however, if thinning is desired, add T9 Thinner at no more than 5% by volume. Small amounts (5% or less) of T-17 thinner will improve roller and brush applications.

Mixing: DEVTHANE® 379H enamel is a two component product supplied in 5 gallon or 1 gallon kits which contain the proper ratio of ingredients. The entire contents of each container must be mixed together. It is important that all mixing equipment is free of moisture and that moisture does not contaminate the coating. Mix the base portion to obtain a smooth, homogeneous condition. After mixing the base portion, add the converter slowly with continued agitation. Mix thoroughly. The pot life of the mixed material is 3 hours at 77° (25°C). Higher temperatures will reduce working life of the coating; lower temperatures will increase it. Avoid storing or placing containers in direct sunlight.

Application: Apply by airless spray, air spray, roller or brush. For airless spray, any air, electric, or gas operated airless sprayer capable of 3,000 psi (207 bars) and able to support a .011" to .017" tip sizes can be used. Multiple guns and long fluid lines require pumps with adequate capacity. For air spray application, use a professional grade gun; a .070" or larger fluid tip. Adjust fluid and air pressure to get a good spray pattern.

Note: Be sure all spray equipment and fluid lines are clean, and free of water or solvents. For brush application, use good quality, dry, clean brushes. For roller application use new, short nap mohair rollers. Do not apply over wet surfaces or under very humid conditions where condensation or fog could settle on the coating during the cure process. Brushing and rolling may require multiple coats to achieve correct film thickness and/or hiding.

Spreading Rate: For maximum protection in corrosive areas, apply at 374 sq. ft. per gallon (9.2 m²/L) or 3.0 mils (75 microns) dry-4.3 mils (105 microns) wet. In mild to moderate exposures, apply at 561 sq. ft. per gallon (13.77 m²/L) or 2.0 mils (50 microns) dry-2.8 mils (70 microns) wet. Make allowance for any losses due to over spray or surface irregularities.

Dry Time (ASTM D 1640): At 70°F (21°C) & 50% R.H., dries to recoat in 6 hours and dries hard in 16 hours.

Clean Up: Use T-9 thinner, except in the South Coast Air Quality Management District use # 4267 Low VOC Cleaning Thinner or other solvent in compliance with local VOC and air quality regulations.

Cure Acceleration: DEVTHANE Cure Accelerator 070A0000 may be used to accelerate cure of this urethane at or below 40°F (5°C). The addition of one to two ounces per gallon of urethane (one to two containers per five gallons of urethane) will decrease the dry hard time approximately one-third to one-half respectively. The pot life will be reduced one-half to three-fourths.

Ultraviolet Light Stabilizer (UVA): DEVTHANE Ultraviolet Light Absorber 080A0000 is already contained in DEVTHANE 379H Aliphatic Urethane Gloss Finish. Additional Ultraviolet Light Absorber is not required or desired.

PRECAUTIONS

DANGER! FLAMMABLE LIQUID AND VAPOR. HARMFUL OR FATAL IF SWALLOWED. ASPIRATION HAZARD - CAN ENTER LUNGS AND CAUSE DAMAGE. HARMFUL IF INHALED. MAY CAUSE CENTRAL NERVOUS SYSTEM EFFECTS, INCLUDING DIZZINESS, HEADACHE OR NAUSEA. CAUSES EYE, SKIN AND RESPIRATORY TRACT IRRITATION. MAY CAUSE ALLERGIC SKIN AND RESPIRATORY REACTION. OVEREXPOSURE MAY CAUSE BLOOD, LIVER, KIDNEY DAMAGE. USE ONLY WITH ADEQUATE VENTILATION. KEEP OUT OF THE REACH OF CHILDREN. NOTICE: Products in this series contain solvents. Reports have associated repeated and prolonged occupational overexposure to solvents with permanent brain and nervous system damage. Intentional misuse by deliberately concentrating and inhaling the contents may be harmful or fatal. For emergency information call (800) 545-2643. **Note: These warnings encompass the product series. Prior to use, read and follow product-specific MSDS and label information.** Keep away from heat, sparks and flame. **Do not** smoke. Vapors may ignite. Extinguish all flames, burners, stoves, heaters and pilot lights and disconnect all electrical motors and appliances before use and until all vapors are gone. Prevent build-up of vapors by opening all windows and doors to achieve cross-ventilation. If sanding is done, wear a dust mask to avoid breathing of sanding dust. Do not breathe vapors or spray mist. Ensure fresh air entry during application and drying. Avoid contact with eyes and skin. If you experience eye watering, headaches, or dizziness, leave the area. If properly used, a respirator may offer additional protection. Obtain professional advice before using. Close container after each use. **FIRST AID:** For skin contact, wash thoroughly with soap and water. If any product remains, gently rub with petroleum jelly, vegetable or mineral/baby oil then wash again with soap and water. Repeat as needed. Remove contaminated clothing. For eye contact, flush immediately with plenty of water for at least 15 minutes. **Get medical attention.** If swallowed, **get medical attention immediately.** If inhalation causes discomfort, remove to fresh air. If discomfort persists or breathing difficulty occurs, get medical attention. **KEEP FROM FREEZING.** DS174-1005

SHIPPING

Flash Point: 80°F (27°C)
Packaging: 1 gallon kit (3.785L) 5 gallon kit (18.925L)
0.80 gallon base 4.00 gallon base
0.20 gallon converter 1.00 gallon converter

Shipping Weight: 1 gallon kit - 16 lbs. (7.5 kg)
5 gallon kit - 59 lbs. (26.8 kg)

*CHROMA-CHEM is a Registered Trademark of Degussa GmbH.



Strongsville, Ohio U.S.A.
800-654-2616
www.devcoecoatings.com

LIMITATION OF LIABILITY: To the best of our knowledge, the technical data contained herein are true and accurate at the date of issuance but are subject to change without prior notice. We guarantee our product to conform to the specifications contained therein. WE MAKE NO OTHER WARRANTY OR GUARANTEE OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE. Liability, if any, is limited to replacement of the product or refund of the purchase price. LABOR OR COST OF LABOR AND OTHER CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED.

379H (05/07)
Ad Stock #67045B

Figure C-1
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

SUPERVAULT MH
Multi-Hazard Rated

INSULATED AND PROTECTED
ABOVEGROUND FUEL STORAGE TANKS
Cylindrical and Rectangular Styles

Owners Manual

SUPERVAULT MH

•Smart •Safe •Secure •Reusable
Fire after Fire, Bullet after Bullet, Impact after Impact

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

SUPERVAULT MH

LISTINGS

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

SuperVault MH
Multi-Hazard Rated Insulated and Protected Aboveground Fuel
Storage Tanks

Cylindrical and Rectangular Styles

TESTING RESULTS

Tests Performed by Southwest Research Institute, San Antonio, Texas

NATIONAL STANDARDS REQUIRE DEMONSTRATED

RESISTANCE TO HIGH INTENSITY LIQUID POOL FIRE EXPOSURE

	Actual Results		Pass/Fail Criteria					
	Initial Test	Retest	SwRI 95-03		UFC Std A-II-F-1		UL2085 Protected	
	Initial Test	Retest	Initial Test	Retest	Initial Test	Retest	Initial Test	Retest
Starting Temperature	80	61						
2 Hour Results								
o Average Temp Rise (°F)	134	139	260	260	260	*	800	*
o Max. Absolute Temp. (°F)	275	212	400	400	400	*	1080	*
4 Hour Results								
o Average Temp Rise (°F)	165	n/a	260	*	*	*	*	*
o Max. Absolute Temp. (°F)	323	n/a	400	*	*	*	*	*

A sample tank was placed in a 2000 °f blast furnace. Thermometers located throughout the tank measure the temperature rise.

* No requirements

HOSE STREAM RESISTANCE

SwRI STANDARDS 95-03 AND 93-01 AND UFC STANDARDS A-II-F-1 REQUIRE DEMONSTRATION RESISTANCE TO HOSE STREAM IMPINGEMENT ON THE TEST TANK IMMEDIATELY AFTER CONCLUSION OF THE RATED FIRE EXPOSURE PERIOD.

For a 4 Hour Fire Rating the hose stream test is 5 minutes of a 45 PSI stream administered through a 1-1/8" fire nozzle. The pass/fail criteria is that the primary tank must remain leak tight after application of the hose stream to test tank.

Not only did the primary tank of the SuperVault MH remain leak tight but there was NO PENETRATION of the outer steel tank and NO LOSS of insulation.

PROJECTILE RESISTANCE

SwRI STANDARD 95-03 AND 93-01 AND UFC STANDARDS A-II-F-1 AND UL 2085 PROTECTED REQUIRE DEMONSTRATION RESISTANCE TO PROJECTILE PENETRATION OF THE PRIMARY TANK.


After conclusion of the hose stream test the SuperVault MH was subjected to 5 rounds of 150-grain, M-2 ammunition discharged from a 0.30 caliber rifle at a distance of 100 feet. The minimum muzzle velocity of the rounds was 2700 ft/sec. bullet resistance is the basis for Projectile Penetration Resistance rating. The SuperVault MH withstood all 5 rounds without penetration of the primary tank.

IMPACT RESISTANCE

SwRI STANDARD 95-03 AND 93-01 AND UFC STANDARD AII-F-1 AND UL 2085 PROTECTED REQUIRE DEMONSTRATION RESISTANCE TO HEAVY VEHICLE IMPACT WITHOUT PENETRATION OF THE PRIMARY TANK.

After anchoring in accordance with the manufacture's instructions the tank will be subject to an impact of 12,000 pounds traveling at 10 mph applied at 18" above the ground surface. The SuperVault MH withstood the impact without penetration of the primary tank.


Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

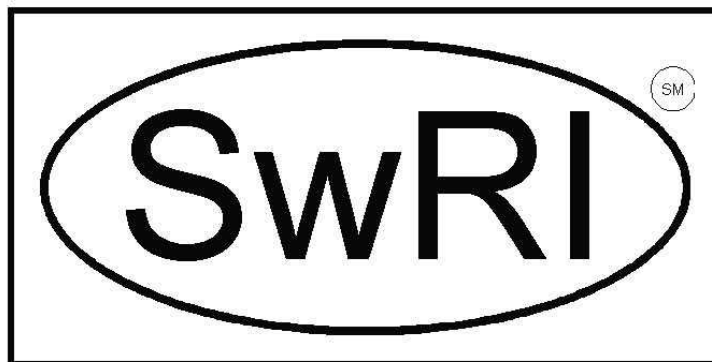


This mark on the product signifies that the product is listed by Southwest Research Institute.

The SuperVault MH is listed for compliance with SwRI Standards 95-03 and 03-01, Uniform Fire Code standard A-II-F-1 (formerly known as UFC 79-7) and UL 2085 Protected. The label on the tank bears the SwRI logo as evidence of listing and indicates compliance with the national standards listed above.

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

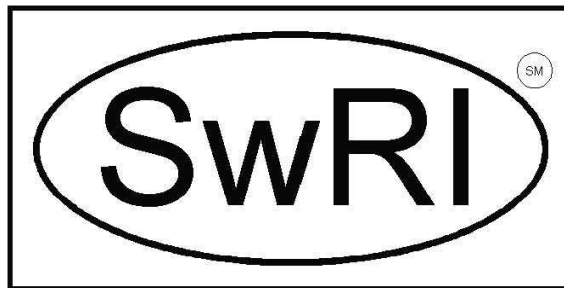

	SuperVault MH Manufactured by Modern Custom Fabrication, Inc. Fresno, CA SwRI ID NO. 02098-01-02 Multi-Hazard Rated Protected Secondary Containment Aboveground Tank for Flammable and Combustible Liquids This product has been evaluated for re-use after exposure to fire, puncture, or heavy-vehicle impact. Should any of these occur, contact the manufacturer. This product has been listed after passing a 4-hour Fire Exposure Test, a Hose Stream Resistance Test, a Projectile Penetration Test, a Heavy Vehicle Impact Test, an environmental exposure evaluation, and an additional 2-hour Fire Exposure Test using the same, fully- assembled test tank for all tests. This tank complies with the requirements of SwRI Test Procedure 95-03, SwRI Test Procedure 93-01, UL 2085 and Section 20.9 of UL 1746 (1993) (Interstitial Communication Test), and is recognized listed product by Southwest Research Institute, San Antonio, Texas. Manufactured under one or more of the following patents: United States patent Nos. 5,038,456; 5,082,138; 5,092,024; and 5,103,996. Manufactured under license from Super Technologies, LLC.
<p style="text-align: center;">LISTED BY:</p> <p style="text-align: center;">Southwest Research Institutes ® San Antonio, Texas</p> <div style="border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto; margin-right: auto;">Serial No.</div>	

SuperVault MH tank Label for Fresno

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

SUPERVAULT MH

INSTALLATION

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

Installation Instructions

These instructions are for the stationary installation of the **SuperVault MH** aboveground tank used for the storage of petroleum products at atmospheric pressure.

No amount of written instruction, provided by manufacturers or regulatory agencies, will serve to convert an incompetent or under supervised mechanic into a competent craftsman. Installation of storage systems for flammable and combustible liquids is a unique field. The ability to recognize and react to unexpected, abnormal conditions that may occur during a tank installation requires experience as well as skill.

In addition to proper system design and operation, use of tank installers who possess both the experience and integrity to insist on doing the job right constitutes the greatest protection against ultimate tank system failure and liability exposure.

Your **SuperVault MH** must be installed in accordance with all applicable federal, state and local environmental regulations and safety codes.

Location

Tank must meet local requirements. The enclosed "Clearance Requirements" diagram is based on the 2003 International Fire Code and is for reference only. Always check with your local authorities for their particular requirements before starting work.

Foundation

Tank foundation must comply with local Building Code regulations. Ask your local Fire Department or Building Department for recommendations. Modern Custom Fabrication Inc. recommends that at a minimum the concrete footing should be sufficiently above grade to prevent

accumulation of debris, dirt and water around the tank supports.

The **SuperVault MH** tank supports and base plates meet the requirements of 2007 California Building Code. Expansion joint material that will not absorb water (asphalt impregnated fiberboard) should be placed between the tank supports and the concrete foundation.

Handling

Do not handle or install tank without having knowledge and experience in procedures involved with safe aboveground tank installation.

Before any attempt is made to move a tank, it should be established that hoisting equipment has sufficient capacity and reach to safely lift and lower the tank without dragging or dropping.

Lifting with nylon straps is preferred to prevent damage of the tank coating. The straps must be clean to avoid scratching the tank coating.

Do not push, drag or drop the SuperVault MH.

Do not handle or move the SuperVault MH unless it is empty.

Venting

All aboveground fuel storage tanks are required to have emergency vents to prevent the buildup of pressure. The emergency venting requirement for **SuperVault MH** tank must be provided by the use of emergency vent valve attached to a properly sized primary tank fitting. The tank manufacturer provides emergency venting for secondary tank by means of relief caps over the pour ports.

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

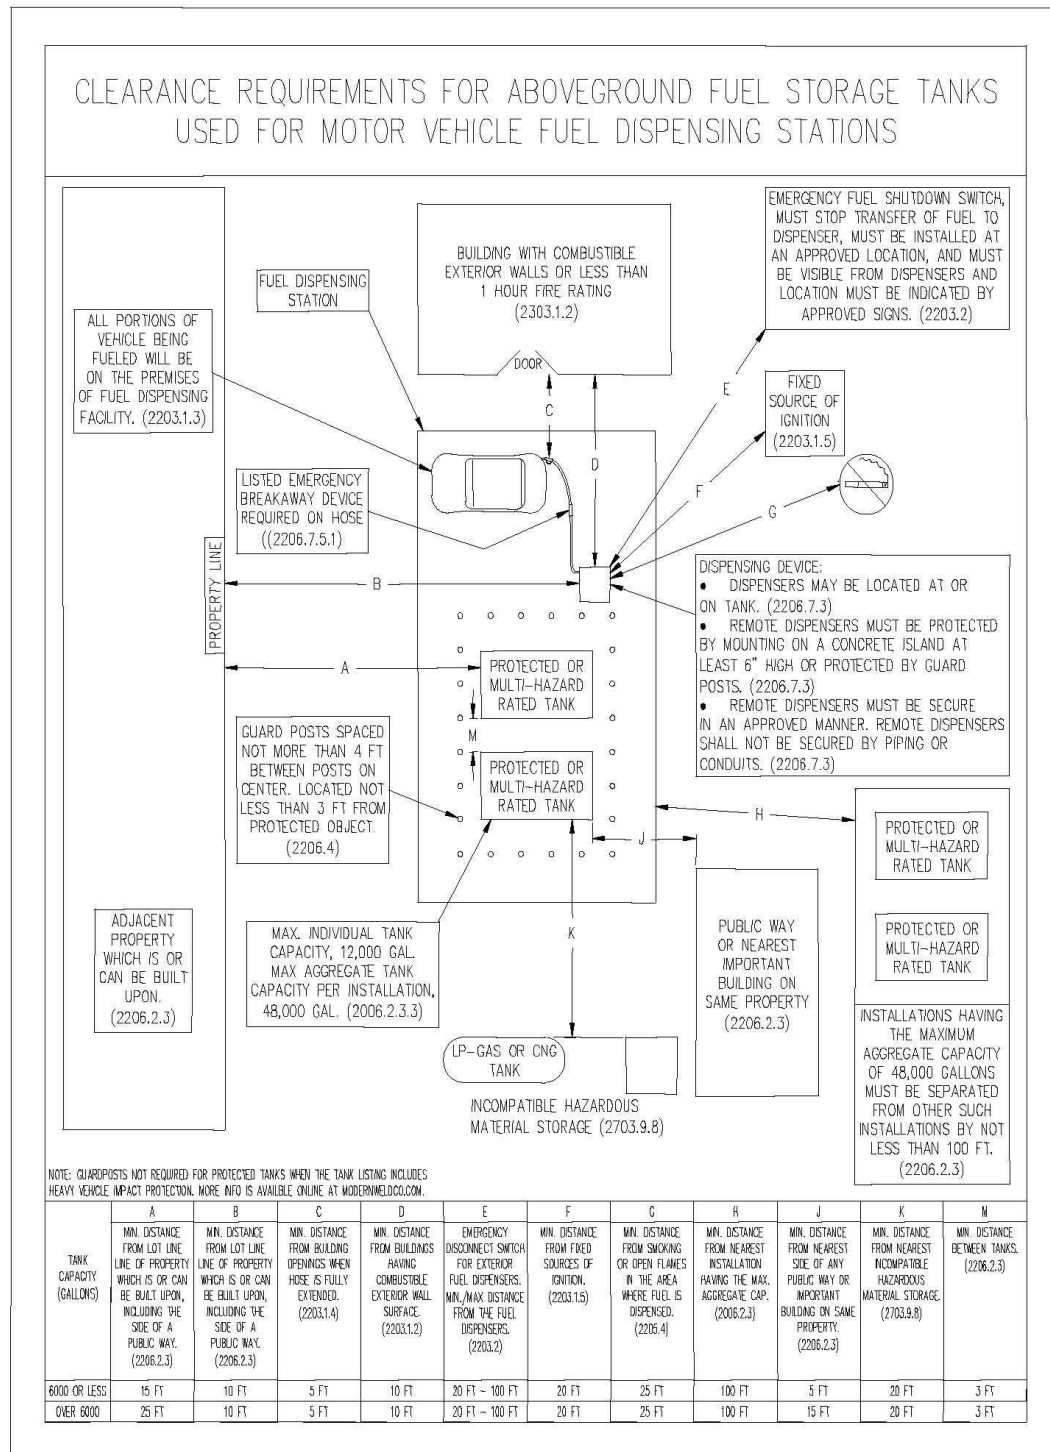


Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

SUPERVAULT MH

TESTING

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

TESTING

Each SuperVault MH is leak tested during the fabrication process by using 5 PSI of positive pressure internally and externally applying a leak detecting solution to all seams and joints. This is performed on both the primary and secondary tanks. Should the owner require additional field testing, the following procedure is offered to meet this requirement.

Warnings:

1. Do not air test a tank which has previously contained flammable or combustible liquids.
2. Air pressure used for this test must not exceed 5 PSI.

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

Procedure No. SV-P1

SUPERVAULT MH ABOVEGROUND PROTECTED FUEL STORAGE TANK
PRIMARY TANK FIELD TESTING

These tanks are thoroughly tested at the factory and certified to be leak free. Should the owner require additional field testing, the following procedure is offered to meet this requirement.

Modern Custom Fabrication Inc. is not responsible for any cost incurred relating to field testing.

PROCEDURE

1. Cap openings and install test equipment in the order listed below starting at compressor or air supply.
 - a. Pressure reducing valve (5 PSI on outlet side)
 - b. 0 to 5 PSI pressure gage
 - c. 5 PSI pressure relief valve
 - d. Shut-off valve
 - e. 0 to 5 PSI pressure gage at tank
2. Slowly raise tank pressure to 4 PSI. CAUTION: Do not exceed 4 PSI.
3. Close shut-off valve when test pressure of 4 PSI is reached.
4. Leak test all pipe caps and test manifold with leak-detecting fluid to insure no loss of air pressure at these points.
5. Record time and pressure gage reading on a Test Log every 5 minutes. After 30 minutes have elapsed, record final pressure test and time.
6. No more than a 1% loss in test pressure over test period is allowed for tank to satisfactorily pass pressure test.

CERTIFICATION

The undersigned hereby certify that the pressure test was performed in strict conformance with this procedure for the SuperVault listed below.

Performed By: _____ Company Name _____ Date of Test	_____ Company Representative Signature _____ Company Representative Name (Please Print)
Witnessed By: _____ Regulating Authority _____ Regulator/Inspector Name (Please Print)	_____ Regulator/Inspector Signature _____ Time
Tank Owner: _____	Customer P.O. No. _____
Installation Address: _____ _____ _____	Delivery Date _____ Installation Date _____ Tank Serial No. _____

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

SuperVault MH Test Log

Date of Test _____

Tank Serial No. _____

Test Start Time _____

Record Pressure

4 PSI Reached (Time) _____ (PSI) _____

1. 5 minute lapse (Time) _____ (PSI) _____

2. 5 minute lapse (Time) _____ (PSI) _____

3. 5 minute lapse (Time) _____ (PSI) _____

4. 5 minute lapse (Time) _____ (PSI) _____

5. 5 minute lapse (Time) _____ (PSI) _____

6. 5 minute lapse (Time) _____ (PSI) _____

No more than a 1% loss in test pressure over test period is allowed for tank to satisfactorily pass pressure test.

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

SUPERVAULT MH

MAINTENANCE

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks

Maintenance

These maintenance procedures cover the tank only. Different applications and sizes of tanks create a variety of equipment configurations that would be impossible to cover in this section. Follow the equipment manufacturer's recommendation for maintenance schedules.

The following tank components should be inspected at least once a week:

Emergency and Normal Vents

Check the operation of the vents for free movement and no obstructions.

Spill Pan

Spill pan should be clean and free of obstructions. Drain valve must have free movement and be normally closed during operation of the tank.

Monitor Tube

Ensure the monitor tube is dry. This can be accomplished by sticking the tube with the gauge stick that is supplied with the tank. If the tank is equipped with a mechanical or electronic monitoring device, test it for proper operation.

Finish

Inspect surface of the tank for chips or corrosion. If found sand, clean and paint in accordance with the paint manufacturer recommendation.

Fuel

Impurities and moisture in fuel can damage the tank and equipment. Check with your fuel supplier for assistance with a clean fuel program and check for procedures to eliminate containments, including water from your fuel.

Figure C-1 (continued)
Modern Custom Fabrication SuperVault MH Series Protected
Aboveground Storage Tanks


FUEL STORAGE TANK MONITORING LOG RECORD

DATE	GASOLINE	DIESEL	OPERATOR	COMMENTS
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
Additional notes for this period:				

DIRECTIONS: WEEKLY

- 1) Tank operator to write in the date the tank leak monitor or indicator is checked.
- 2) Operator write in condition observed for each tank, i.e. dry or fuel present.
- 3) Operator to initial and comment on condition of each tank.
- 4) Report any liquid present in the monitor tube or alarm condition to your supervisor.
- 5) Tanks fitted with float actuated LEAK GAUGE have viewing indicator window.
CLEAR indicates NO LEAKS, RED indicates LEAK. Check gauge periodically for proper operation.

Figure C-2
Steel Tank Institute Fireguard Protected Aboveground Storage Tanks

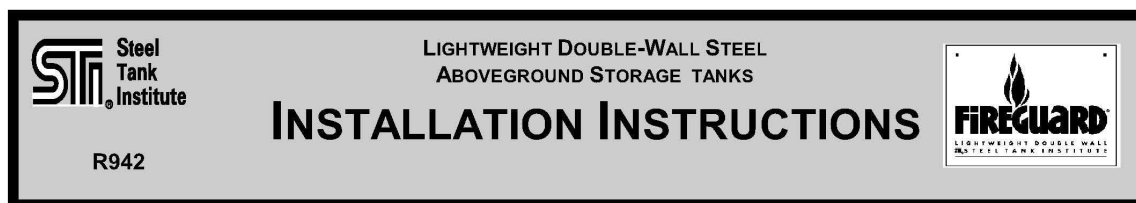

FEBRUARY 2007

1.0 TANK SITE EVALUATION AND PREPARATION PRIOR TO INSTALLATION

- 1.1** The foundation must be designed to support the tank plus 100% of its contents when full. The foundation design shall also take into account the type of support that is being used and the point load associated with that support. The foundation may be constructed using concrete, asphalt, gravel or other stable material and must include provisions in its design to prevent tank movement. The foundation should include any provisions necessary for seismic design.
The foundation design must also include provision for draining surface water away from the tank.
- 1.2** For tank installations without cathodic corrosion protection, the tank should be grounded in accordance with applicable electrical and fire code standards.
- 1.3** Where the steel tank body is in contact with the earth, use a zinc grounding rod. Do not use a copper grounding rod.
- 1.4** Where the steel tank body is in contact with the earth or foundation, it should be protected from external corrosion. For external corrosion protection using cathodic corrosion protection, consult applicable standards (i.e., National Association of Corrosion Engineers) to provide the tank with appropriate protection from lightning without interference with the corrosion protection. Steel tanks in contact with the earth should not use copper grounding. Refer to STI R893-89, "Recommended Practice for External Corrosion Protection of Shop Fabricated Aboveground Storage Tank Floors."
- 1.5** Tanks located in areas subject to flooding must be protected against floatation.
- 1.6** Aboveground tanks should not be located above underground utilities or directly beneath overhead power lines.

- 1.7** The tank shall be protected from vandalism and accidental damage in accordance with all applicable codes, i.e., NFPA 30, NFPA 30A, UFC, etc. as well as local environmental regulations and safety codes. Consult local authorities before installing this tank.

2.0 TANK HANDLING

- 2.1** Do not handle or install the tank without having knowledge and experience in procedures involved with proper and safe installation of an aboveground tank used for storage of stable, flammable and combustible liquids.
- 2.2** Equipment for handling the tank shall be of adequate size to lift and position the tank. **DO NOT DROP OR DRAG THE TANK.**
- 2.3** Tanks shall be carefully handled using cables or chains of adequate length (with spreader bars, if necessary) and size. Attach to the tank using the lifting lugs provided. Care should be taken that the angle between the two cables, at the lift point, shall be no greater than 60 degrees.
- 2.4** **DO NOT HANDLE OR MOVE THE TANK UNLESS IT IS EMPTY.**
- 2.5** This is a stationary tank. Do not use this tank for transport of any product.

3.0 TESTING

3.1 General Requirements

- 3.1.1** An on-site air test of the tank may be required by local authorities to ensure no damage has occurred in shipping and handling. All testing shall be done as described below.
- 3.1.2** Vacuum monitored double wall tanks are shipped from the manufacturer with a vacuum drawn on the space between the walls. Read and record the vacuum pressure. If the vacuum gauge reading is less than 12 inches

Figure C-2 (continued)

Steel Tank Institute Fireguard Protected Aboveground Storage Tanks

- 3.1.3 In lieu of the air pressure test described below, a vacuum may be applied to the interstice of a double-wall tank or to the interstice of a double-bottom tank. DO NOT APPLY A VACUUM TO THE PRIMARY TANK OF A DOUBLE-WALL TANK OR TO A SINGLE-WALL TANK. A vacuum of 7" to 10" Hg is to be applied to the interstice and held for at least 24 hours with no more than a 2" Hg vacuum loss allowed. If this vacuum cannot be held for 24 hours, then perform the air test procedure described below.

- 3.1.3.1 Caution must be taken in applying a vacuum to the interstice of a tank and the testing must be stopped if any deformation appears on the tank.

3.2 Air Pressure Test Procedure for Tanks

- 3.2.1 Remove emergency vents and cap openings to hold tank pressure as required.

NOTE: Use only calibrated air pressure gauges with a 0-15 psig (0-103 kPa) dial span. The relief valve must have a flow rate at the set pressure that is greater than the flow rate of the air supply line. The regulated air supply test pressure used for this test should be as follows:

- a. **Horizontal cylindrical tanks** - Not less than 3 psig (20.7 kPa) nor more than 5 psig (34.5 kPa). Set the pressure relief valve in the test air supply line at 5.5 psi (38 kPa).
- b. **Vertical tanks**-Not less than 1½ psig (10.4 kPa) nor more than 3 psig (20.7 kPa). Set pressure relief valve in test air supply line at 3 psig (20.7 kPa).
- c. **Rectangular tanks**-Not more than 3 psig (20.7 kPa). Set pressure relief valve in test air supply line at 3 psig (20.7 kPa). CAUTION: Do not leave pressurized tank unattended while the pressure line/air line is connected. Do not stand in front of tank heads or fittings when pressurizing tank. Pressurizing of large tanks may result in the slight deformation of the top and bottom of vertical tanks, of the sides of rectangular tanks, and of the heads and ends of cylindrical tanks. Should


deformation appear severe, immediately relieve the pressure.

3.2.2 Tank Pressurizing Procedure

- 3.2.2.1 The following air pressure testing does not apply to double-wall tanks equipped with interstitial vacuum monitoring systems. (In lieu of the air pressure test, the tank may be shipped from the factory with a vacuum in the tank interstice. Read and record the vacuum pressure. If the vacuum pressure gauge reading is less than 12 inches Hg (40.5 kPa), contact the tank manufacturer).

- 3.2.2.2 Install test piping as shown in Figure 2. Close valves A and B. Open valve C. Temporarily plug, cap or seal off remaining tank openings to hold pressure.

- 3.2.2.3 Connect the regulated test air supply line to test piping as shown in Figure 2.

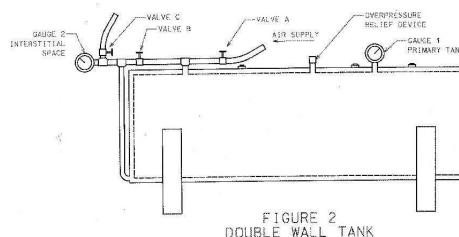

- 3.2.2.4 Close valves B and C. Slowly open valve A to pressurize the primary tank. Pressure gauge 1 should indicate test air pressure given in Section 3.2.1 above.

- 3.2.2.5 Close valve A. Disconnect the regulated test air supply line from the test piping.

- 3.2.2.6 Monitor test pressure in the primary tank for 1 hour minimum. A steady drop in pressure reading for gauge 1 indicates there may be a leak in the primary tank. Check the fittings, the gauge, and then retest. If the problem persists, contact the tank manufacturer.

- 3.2.2.7 If no leaks are found, close valve C and slowly open valve B to pressurize the interstitial space between the double walls of the tank.

Figure C-2 (continued)

Steel Tank Institute Fireguard Protected Aboveground Storage Tanks

WARNING: Do not apply air pressure to the interstitial space between the walls of a double wall tank without air pressure in the primary tank. Do not apply air pressure to the interstitial space that is higher than the air pressure in the primary tank. Damage to the tank may result.

Pressure gauge 1 will indicate a slight drop in test pressure when valve B is opened, but should hold steady at the lower pressure. If the test pressure drops below the minimum requirements, close valve B, reconnect the air supply line and slowly open valve A to increase the pressure in the primary tank. When the required pressure is indicated on gauge 1 close valve A, disconnect the test air supply line. Open valve B to equalize pressure in the primary tank and the interstitial space. Gauge 1 and gauge 2 should have the same pressure reading.

- 3.2.2.8** Close valve B. Hold the test pressure in the interstitial space for 1 hour minimum. A steady drop in pressure gauge 2 indicates there may be a leak in the interstitial space. Check the fittings, the gauges, and then retest. If the problem persists, contact the tank manufacturer.

- 3.2.2.9** Proceed to Section 3.2.3, "Detection of Leaks" below.

3.2.3 Detection of Leaks

- 3.2.3.1** Immediately apply the leak test solution to the tank exterior surfaces, welds, fittings, etc. Check for leaks. No leaks are allowed. If leaks are found, notify the tank manufacturer. If no leaks are found, testing of the tank is complete.

- 3.2.3.2** Open valve C, then slowly open valve B to release the test air pressure.

- 3.2.3.3** With the tank depressurized, remove the test piping, temporary plugs, caps and seals. Reinstall the emergency relief vents, etc. which were removed in Section 3.2.1 above. Emergency vents are required on both the primary tank and the secondary tank.

WARNING: Emergency relief vents must be operable to prevent causing tank failure by over-pressurization.

4.0 TANK PIPING AND ACCESSORIES

- 4.1** Install all permanent piping and fittings using compatible, non-hardening thread sealant material.
- 4.2** All unused tank openings must be properly sealed and tested to be liquid and vapor tight prior to putting the tank into service.
- 4.3** **DO NOT WELD ON THE TANK, MODIFY OR PENETRATE THE TANK STRUCTURE IN ANY WAY WITHOUT THE EXPRESS WRITTEN PERMISSION OF THE TANK MANUFACTURER.**
- 4.4** All tank accessories shall be installed as required per local codes. Anti-siphon devices, overfill shut-offs and alarms, vents gauges, emergency vents, etc. are common requirements for tanks storing motor fuels for the purpose of being dispensed into motor vehicles.

5.0 LABELING

- 5.1** Tanks shall be labeled in accordance with all applicable codes.

6.0 MAINTENANCE

- 6.1** The tank operator should perform periodic walk-around inspections to identify and repair areas of damage to the vessel or the coating itself and check for proper drainage around the tank area.
- 6.2** It is imperative that the tank exterior be inspected periodically to ensure that the integrity of the coating is maintained. The frequency of periodic repainting will be based upon environmental factors in the geographic area where the tank is located. Special consideration should be given to the selection of the paint, surface preparation and coating application. The coating selected should be suitable for use with the current coating, or the existing coating should be removed. The coating

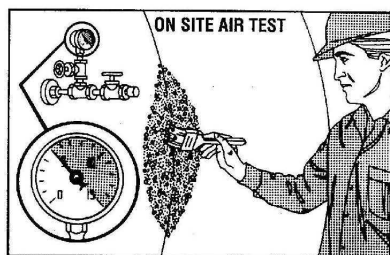


Figure C-2 (continued)
Steel Tank Institute Fireguard Protected Aboveground Storage Tanks

- selected should be of industrial quality.
- 6.3** Proper site preparation and maintenance are vital to ensure drainage of surface water. Should ground conditions change or settlement occur, take the appropriate steps to maintain proper drainage and prevent standing water near or under the tank area.
- 6.4** The primary tank shall be inspected monthly for the presence of water at the lowest possible points inside the primary tank. Remove any water found. Water and sediment in fuel can cause plugging of filters. Also, bacterial growth, originating from the fuel can cause corrosion of tanks and lines. For procedures on how to check for the presence of water and removal of water, refer to API Recommended Practice 1621, Appendix D and API Standard 2610. Another source of information is a report by the US Department of Energy Brookhaven National Laboratory, BNL 48406, which provides information on methods to test for and remove water, test for bacterial presence in fuel, tank cleaning and fuel additives.
- 6.5** This tank must be removed from service if damaged by fire exposure, other physical means or misuse.
- 6.6** Failure to adhere with these maintenance instructions may void your warranty.
- 6.7** Tank relocation requirements - often aboveground storage tanks are relocated. The following instructions are to be followed when this occurs: All steps are to be documented and the documentation is to be kept for the life of the tank.
- 6.7.1** The hazards associated with the cleaning, entry, inspection, testing, maintenance or other aspects of ASTs are significant. Safety considerations and controls should be established prior to undertaking physical activities associated with ASTs. Cleaning of tanks must be per state and local jurisdiction requirements.
- 6.7.2** Refer to the STI Standard SP001, "Standard for the Inspection of Aboveground Storage Tanks" for requirements concerning tank inspections. This SP001 Standard details requirements for inspections based on the tank installation and age. A tank must undergo

the appropriate inspection prior to relocation.

- 6.7.3** In addition, the tank must be subjected to a pressure (or vacuum) test as detailed paragraph 3.2 above except an inert gas, such as nitrogen, should be used for tanks that have previously held fuel.

Disclaimer


These instructions are intended only as an aid to tank installers who are knowledgeable and experienced in aboveground tank installation. Compliance herewith does not necessarily meet the requirements of applicable federal, state and local laws, regulations and ordinances concerning tank installation. STI makes no warranties, express or implied, including but not limited to, any implied warranties of merchantability or fitness for a particular purpose, as a result of these installation instructions.

Figure C-3
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

INSTALLATION INSTRUCTIONS

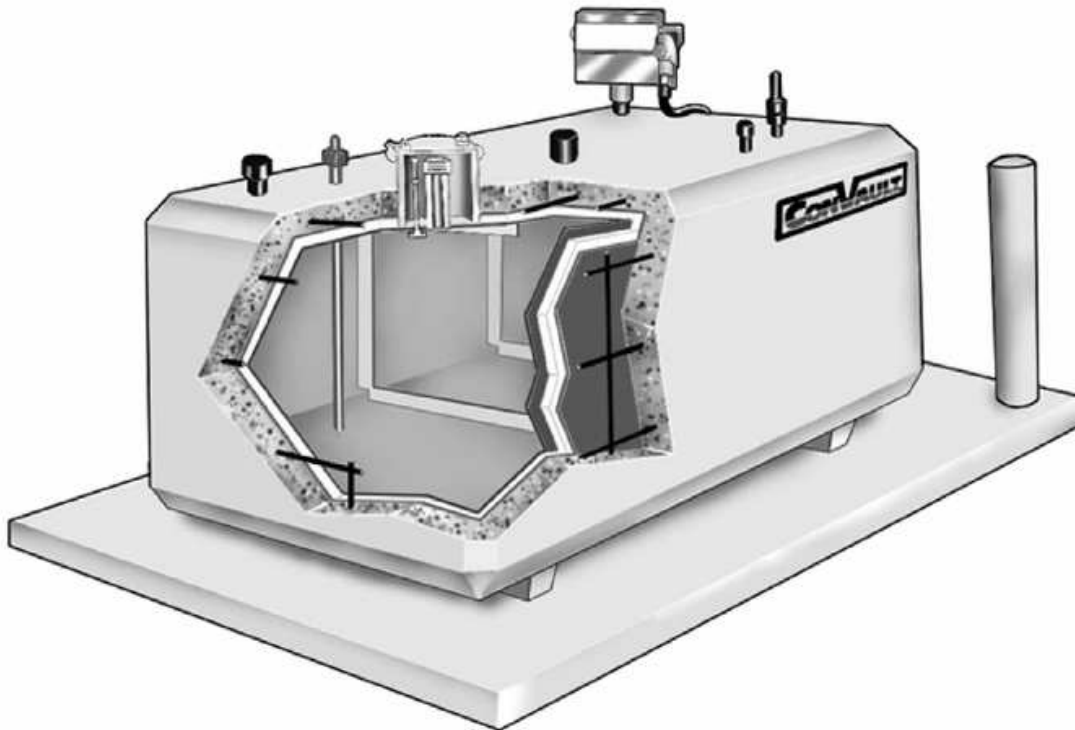

April 2007

Installation Instructions

Pg. 21

Figure C-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

TABLE OF CONTENTS

	Page No.
A. SCOPE	23
B. PERMITS AND APPROVALS	23
C. TANK SITE	24
D. BOLLARD INSTALLATION	25
E. FOUNDATIONS	26
F. TANK HANDLING	27
G. TRANSPORTATION	28
H. UNLOADING AND SETTING	28
I. EQUIPMENT REQUIRED AND PROCEDURES	29
J. GROUTING OF LEGS	31
K. ELECTRICAL	32
L. PIPING	32
M. GENERAL APPLICATION REQUIREMENTS	33
N. DISPENSING APPLICATIONS	34
1. On Tank Suction Type Dispensing Application	34
2. Side Mount Suction Type Dispensing Application	35
3. Off Tank Suction Type Dispensing Application	36
4. Submersible Pump Dispensing Application	37
O. GENERATOR FUEL SUPPLY APPLICATION	38
P. USED OIL	41

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

A. SCOPE

1. These instructions apply to stationary, shop fabricated, aboveground, concrete encased steel tanks for the storage of stable, flammable and combustible liquids at normal atmospheric pressure. Because the tank installation is a specialized skill, it is assumed that those using these instructions will have knowledge of, and possess the skills and equipment necessary to install this type of aboveground storage tank properly and safely.
- **NOTE:** Consult the Authorities Having Jurisdiction to insure compliance with local codes and regulations prior to carrying out any instructions given herein.

B. PERMITS AND APPROVALS

1. Because of the combustible and flammable nature of the hydrocarbon liquids stored in the Aboveground Storage Tanks (AST), they are subject to various codes, and regulations. The codes and regulations govern the fabrication, testing, shipment, installation, operation, and maintenance of the tanks. The codes and regulations may originate from local fire authorities (e.g. Fire Marshals), local building jurisdictions (e.g. city or county building officials), state laws and regulations (e.g. Air Resource Board), Federal agencies (e.g. Environmental Protection Agency) and regional and national codes (e.g. National Fire Protection Association (NFPA), Uniform Fire Code (UFC), or International Fire Code (IFC).
2. Installation, operation and maintenance of the tanks must be carried out in accordance with the applicable codes and regulations. These aboveground storage tanks are intended for installation in accordance with NFPA 30, NFPA 30A, UFC (including article 79 Appendix A-II-F), and IFC.
3. System installation starts with obtaining the required state and local permits.
4. Typical approval process and documents needed are shown in the **List 1, Page 17, Product Description**. Specific local or jurisdictional requirements may slightly differ from location to locations but the list is a good reference and a guide for your permit requirements.
5. State and local permit applications must be made with the current and up-to-date forms.
6. Zoning permits may also be required.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

C. TANK SITE

- **NOTE:** The location of each ConVault® tank is stored in ConVault, Inc.'s central data bank. If the tank is to be relocated to a different location, ConVault, Inc. must be properly notified to update the data bank. The product limited warranty could be voided if ConVault® is not informed of tank relocation or if tank is not reinstalled in accordance with these installation instructions. It should be noted that ConVault® Warranty is conditional on installation of tanks in accordance with ConVault® Installation Instructions. Your attention is specifically drawn to the tank site selection and foundations requirements.

⚠ WARNING Follow the instructions enumerated below. Failure to follow these instructions may result in death or serious injury.

1. Tank location and foundation to comply with the current edition of the Uniform Building Code (UBC) and all applicable local codes and ordinances. For sites subject to ground frost, the foundation slab design should be reviewed to take into consideration frost line requirements.
2. The tanks should be located a minimum of 1/3 the height of the vault away from down slopes - greater than 3:1, and 1/2 the height of the vault away from up slopes smaller than 3:1.
3. Tanks located in areas subject to flooding must be protected against floatation. Flood resistant tie-down brackets are available for all tank sizes to resist floatation during complete submergence.
4. Aboveground storage tanks should not be located over underground utilities or directly beneath overhead power and telephone lines.
5. The tank should be protected from vandalism and accidental damage in accordance with all the applicable codes.
6. Fire department vehicle access should be provided within 150 feet of any tank.
7. The venting of a tank to a remote location must include the use of a steel pipe equal to or greater in size than the vent outlet, and the methods of supporting such piping against displacement must comply with local codes. Provide the vent piping with a slope to ensure that all condensed vapors drain back to the tank.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

D. BOLLARD INSTALLATION

Collision protection is recommended on sides of the tank exposed to traffic. This is generally accomplished with pipe bollards. Always check state and local codes. Sample installations are shown below:

Spacing from the tank should conform to the applicable code requirements.

As an alternative to steel pipes, you may use precast concrete barriers. You can obtain the precast barriers from your ConVault® representative.

Figure No. 6
Sample Bollard Installation

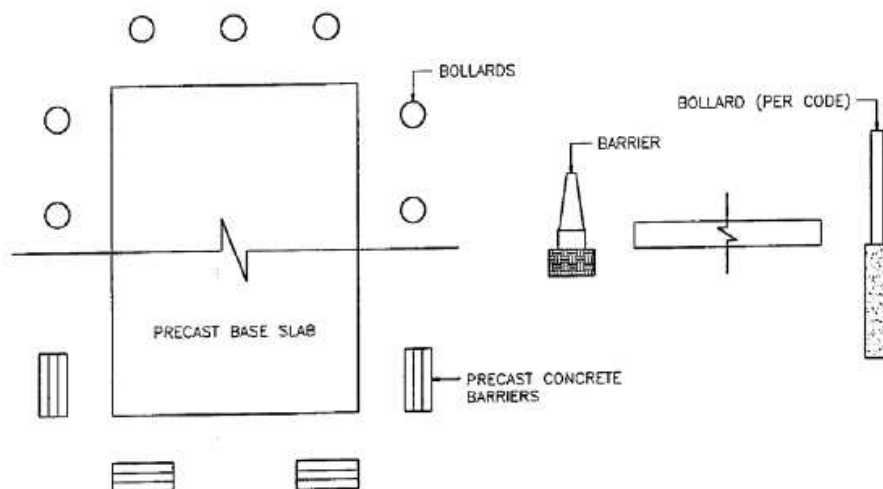


Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

E. FOUNDATIONS

CAUTION Failure to provide proper foundation may result in damage to the tank and equipment affixed to it and may void the tank warranty.

1. Tank location and foundation must comply with requirements of the current edition of the relevant building code and all the applicable local codes and ordinances.
2. The tank slab may be poured in place using the ConVault standard slab drawing, which may be obtained by contacting ConVault or your local representative. An alternative to pouring the slab in the field is to purchase a precast slab from the manufacturer.
3. The foundation for the tank must be designed to support the tank plus the weight of the maximum amount of product the tank will be storing. The foundation design must also include provision for draining surface water away from the tank to minimize the risk of fuel accumulation under the tank from an overflow or spills.
4. Tanks located in areas subject to earthquake must be protected against seismic forces. Optional earthquake restraints are available. The restraints can be retrofitted to the slab should local requirements change. The restraints are mounted on the slab and are secured with anchor bolts directly into the slab. The tank feet rest in the restraints and do not require bolting directly to the tank. Insure that the slab is large enough to accommodate earthquake restraints or hold-downs.
5. Tanks located in areas subject to hurricanes may be required by your local Authority Having Jurisdiction (AHJ) to be fitted with hurricane hold down restraints.
6. The tank foundation is to sit on undisturbed earth or compacted fill, free of organic material.
7. The following minimum soil characteristics may be used if the ConVault® tank is installed on a continuous solid slab which will uniformly distribute the weight of the tank and its contents to the soil:
 - a. Bearing Capacity: minimum 1,000 but preferably 2,000 lb. per sq. ft.
 - b. Total settlement: 1 inch maximum.
 - c. Differential settlement: 1/2 inch maximum.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

- d. Provide a minimum six-inch (6") thick granular sub-grade, compacted and graded to a level uniform subsurface prior to the cast slab placement or pouring of the cast-in-place slab.
- e. A geological engineer should evaluate the effect of the water table and frost lines if such unusual conditions exist at the site.
- f. Soil surface and granular sub grade under foundation should be flat within 1/16" per foot. Soil around foundation should be sloped away 1/8" per foot minimum for 5 feet.
- **NOTE:** If Bearing pads are used under the tank legs instead of grouting, the tank foundation and slab should be designed to withstand concentrated loads under the bearing pads. For grouting instructions see paragraph J on Page 31.
- **NOTE:** The above soil characteristics, foundation and slab design requirements may be revised by a qualified design engineer who would design the foundation and the slab on a site-specific basis.
- **NOTE:** Some Authorities Having Jurisdiction require up-lift restraints for areas subject to flooding and hurricanes.

F. TANK HANDLING

▲WARNING Failure to obey the following tank handling instructions may result in death or serious injury.

- **NOTE:** Do not handle or install tank without having knowledge and experience in procedures involved with proper and safe installation of an aboveground tank used for storage of flammable and combustible liquids. Reliance on skilled and professional installers is an important factor in avoiding damage to tank and system failure.
- 1. Equipment required in the shipping and off-loading of ConVault® aboveground storage tanks include lifting straps, nylon tie-down straps, crane, forklift, and carpet remnants strategically placed on the bevels to prevent the tie-down straps from scraping the paint loose while the tank is en-route. See also **Equipment Required and Procedures** Page 29.
- 2. Do not drop or drag the tank. Dropping or dragging a tank may result in damaging the tank beyond repair and voiding the ConVault® Limited warranty.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

3. Do not handle or move the ConVault®, unless it is empty. Under no circumstances should a tank containing petroleum product be moved.
4. If petroleum product has been introduced in the tank, first empty and cleanse the tank, then relocate using the Department of Transportation Guidelines for transporting fuel containers.

G. TRANSPORTATION

It is important that ConVault® tanks are properly lifted and loaded on trailers and flat beds. The tank should be supported on solid lumber under the far two legs. The tank should be properly secured to prevent sliding and undue vibration from the road.

CAUTION ConVault® 8,000 through 12,000-gallon tanks are provided with three legs. The middle leg is approximately $\frac{3}{4}$ " shorter than the other two. The middle leg is made shorter to prevent the tank from damage caused by vibration while being transported. Therefore, the middle leg should not be supported on the trailer or on the flatbed. Supporting the third leg during transportation may result in property damage.

H. UNLOADING AND SETTING

WARNING Failure to provide adequate equipment and proper procedures for unloading and setting the tank may result in death or serious injury.

1. The unloading equipment and procedures are critical to setting the tank safely and without harming the people or damaging the tank.
 - **NOTE:** The most important aspect of a job procedure is SAFETY. Please ensure that every step of this procedure is carried out with safety first in mind.
2. Tanks Weight and Dimensions.

Please refer to Figures No. 2, 3, 4 and 5 in Product Description, pages 13 through 16. For actual tank weights and dimensions, please contact your ConVault® distributor.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

I. EQUIPMENT REQUIRED & PROCEDURES


1. Following is a list of equipment that may be required to handle a ConVault® tank:
 - a. A crane or a forklift of sufficient capacity to safely lift and place the unit.
 - b. Slings minimum 20 feet long each and rated for the tank weight. The angles between the slings should be at least 50 degrees.
 - c. 4-way spreader.
 - d. Miscellaneous shackles, tag lines, and rigging tools.
2. Note the following guidelines to handle and install a ConVault® tank.
 - a. Plan the required crane and rigging capacity to safely unload the tank.
 - b. Inspect the tank on the delivery truck prior to unloading. Report any damage in transit to the truck driver and note on the shipping ticket.
 - c. Allow sufficient crane time for installing the load block and organizing the rigging.
 - d. During unloading and setting, allow one person in-charge to signal the crane operator. Keep people clear of the load and avoid being trapped between the load and building walls and equipment.
 - e. Make sure there is no overhead wiring to interfere with crane or boom operation. Provide sufficient room for cranes and boom trucks to off load.
 - f. Department of Transportation prohibits transportation of tanks with product and warning labels. Product and warning labels should be installed on site. If installed at the plant, they should be masked prior to shipment. Labels and decals must be placed on the tank in accordance with **Figure No. 7** page 30.

Figure C-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

Figure No. 7

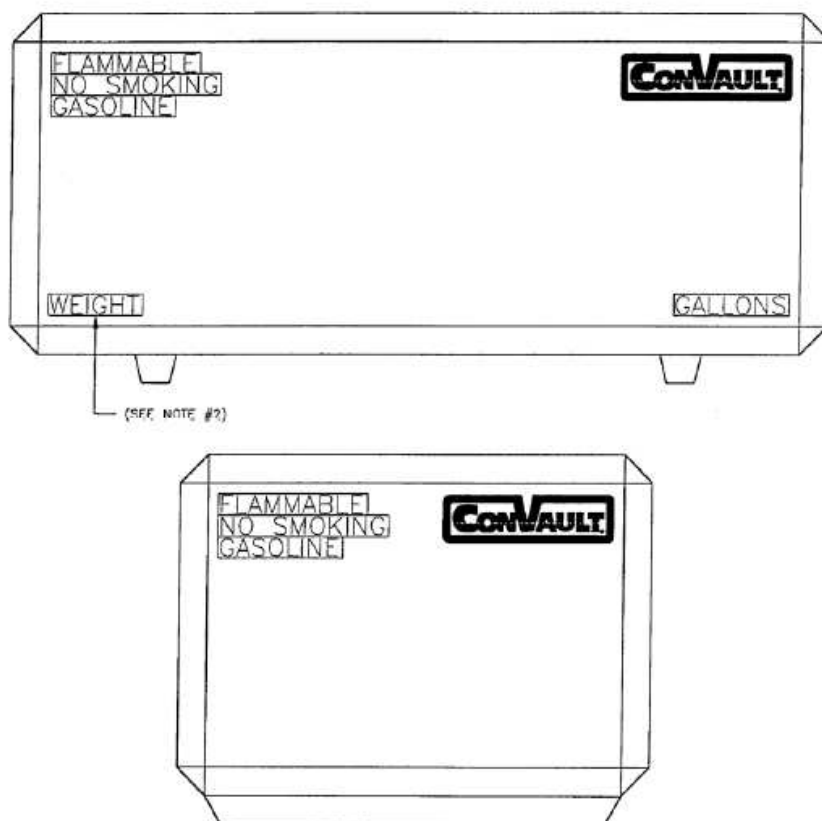

NOTES:

1. For best results, attach decals or signs at 60° – 70° F.
2. Empty weight.
3. ConVault logo to be located in upper right corners.
4. NO SMOKING, FLAMMABLE or COMBUSTIBLE and "product" signs to be located in upper left corners.
5. Capacity signs to be located in lower right corner of long sides.
6. Weight signs to be located in lower left corner of long sides.
7. FILL, VENT, EMERGENCY VENT, LEAK DETECTOR TUBE, Do Not Drill..., Caution: This Tank..., signs to be located along upper bevel near corresponding nipples.
8. Warning: Death May Occur... sign to be located on top of tank near manway, if applicable.

Figure C-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

J. GROUTING OF LEGS

1. All tanks larger than 2000 gallon must be grouted with non-shrink grout to the concrete slab or supported with alternative engineered pad interface.
2. We recommend grouting the legs of all tank sizes, which will provide a uniform load distribution on legs and foundations.
3. Neoprene pads may be used instead of grouting in accordance with the manufacturer's recommendations. Pads should be neoprene with 50 durometer Type A hardness. The physical properties of neoprene pads should meet or exceed AASHTO specifications M251, Sections 18, 25. For specifications and installation instructions of neoprene pads contact your ConVault® representative.
4. Also, see Notes on page 27 under **FOUNDATIONS**.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

K. ELECTRICAL

1. Electrical service and fuel piping to the pump units should be installed in accordance with the requirements of National Electric Code (NEC)- NFPA 70 and local requirements.
2. All electrical devices used with or located within twenty (20) feet of the ConVault® tank should conform to NEC Hazardous Locations. All electric conduits and wiring connected to the tank should be explosion proof and in strict accordance with NEC Class-1, Division 1 or other local standards whichever is stricter.
3. An emergency shut-off switch is required to be mounted in a location visible from the dispenser. The switch is normally mounted on a building wall or a post. The switch must be marked as an emergency shut-off switch, in accordance with NEC.
4. Pumps and all other equipment used in the hazardous area should be rated by UL or Factory Mutual (FM).
5. Electrical grounding is required for flammable liquid fuel tanks. ConVault® Tanks are provided with two grounding bolts welded to the steel tank or lugs welded to the nipples on tank top. Installation of grounding shall be in accordance with the NFPA 780 code. See Appendix B of this manual for a summary of **Lightning Protection Installation Instructions**.

L. PIPING

1. Piping on ConVault® tanks will mainly depend on dispensing method considered for your facilities. Several methods are suggested below. You should note that dispensing methods suggested here are schematic only and they are not detailed installation drawings. You should engage an engineer/designer to design the piping arrangement and make sure they are in accordance with the applicable codes, rules and regulations. Please also make sure you check with your Authorities Having Jurisdiction and find out which codes and regulations are applicable to your area.

CAUTION Do not connect any fuel return or vapor recovery pipe to leak detector tube or communication nipple. Failure to comply will result in filling the interstice with fuel and consequently voiding your warranty. The leak detector tube and the communication nipple are powder coated red for easy identification.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

M. GENERAL APPLICATION REQUIREMENTS

1. The following requirements apply to all applications:
 - a) Fuel tank shall be located with set backs from buildings, property lines and public highways in accordance with state and local codes.
 - b) Emergency venting device shall be installed on the emergency vent pipe nipple prior to use. See also paragraph H.2 on page 48 for operation.
 - c) Pressure vacuum vent (PV) caps shall be installed on normal vent.
 - d) Phase I vapor recovery system shall be installed, if required by the Authorities Having Jurisdiction.
 - e) Net positive suction head (NPSH) problems and cavitation may occur in extremely high altitudes or as a result of long suction piping. In these cases, use of submersible pump should be considered.
 - f) Fire extinguishers shall be provided as required by the applicable fire codes.
 - g) A cleanup kit shall be provided at the site.
 - h) Always consult Authorities Having Jurisdiction.
2. The following requirements apply to **Dispensing Applications** shown in **Figures 8 through 11**:
 - a) Dispensing shall be by a UL/ULC listed pump equipped with:
 - i. Vacuum breaker
 - ii. Filter and adapter
 - iii. UL listed fuel hose
 - iv. Safety breakaway valve
 - v. Auto shutoff nozzle
 - b) Phase II vapor recovery system shall be installed, if required by the Authorities Having Jurisdiction.
 - c) Any pump described as "remote" must be approved by the Authorities Having Jurisdiction in advance of the installation of the pump.
3. The following requirements apply to **Generator Fuel Supply** shown in **Figures 12, 13 and 14** and recommended piping shall include:
 - a) Angle check valve with pressure relief or foot valve, strainer and pressure relief valve.
 - b) Shut-off valve with fusible link on supply piping
 - c) Anti siphon valve if the level of the suction piping falls below the high level of fuel in the tank.

Figure C-3 (continued) ConVault® Aboveground Storage Tanks




The Industry Leader In Aboveground Fuel Storage Systems

N. DISPENSING APPLICATIONS

1. On-Tank Suction Type Dispensing Application

Dispensing from the ConVault® tank system is most simply accommodated by a top of tank pump. This arrangement eliminates leaking valves and fittings. Our recommended dispensing configuration is shown in Figure 8. Diagram provided is recommended for sites with tanks 2000 gallon and less that serve the end-user's internal fleet/vehicles. See the General Applications Requirements in M.1 and M.2 on page 33.

Figure No. 8

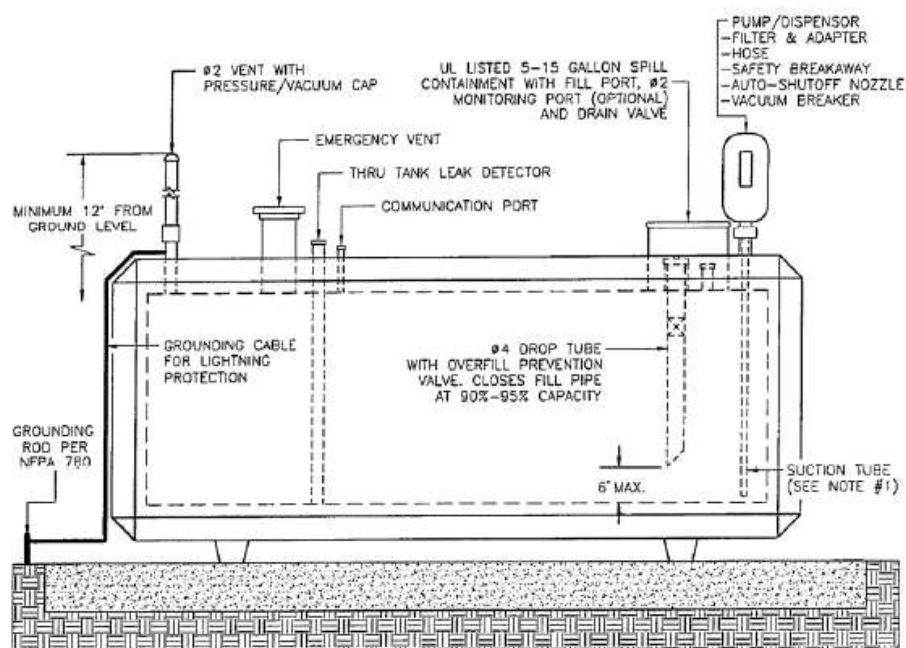

Notes:

1. Bottom of foot valve/strainer to be 1" from bottom of steel tank
2. Stairway assembly to fill port (optional)

Figure C-3 (continued) ConVault® Aboveground Storage Tanks




The Industry Leader In Aboveground Fuel Storage Systems

2. Side-Mount Suction Type Dispensing Application

The diagram provided in **Figure 9** is recommended for the sites to dispense fuel to private user or for fleet vehicles. In addition to the **General Applications Requirements in M.1 and M.2 on page 33**, the system should be equipped with:

- a) Anti siphon valve with pressure relief or solenoid valve.
- b) Emergency shear valve, if required by Authority Having Jurisdiction.

Figure No. 9

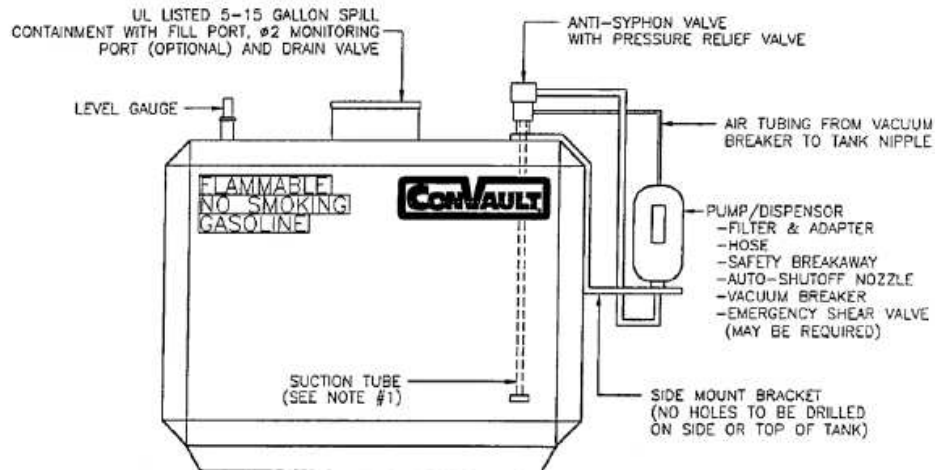

Notes:

1. Bottom of foot valve/strainer to be 1" from bottom of steel tank
2. Stairway assembly to fill port (optional)

Figure C-3 (continued) ConVault® Aboveground Storage Tanks




The Industry Leader In Aboveground Fuel Storage Systems

3. Off-Tank Suction Type Dispensing Application

The diagram in Figure 10 provided is recommended for those sites authorized to either: dispense to motor vehicles for public use or fleet vehicles with high-speed dispensing accessories. In addition to the **General Applications Requirements in M.1 and M.2 on page 33**, the system should be equipped with:

- a) Angle check valve or anti siphon valve with pressure relief,
- b) Under pump emergency shear valve, if required by Authority Having Jurisdiction.

Figure No. 10

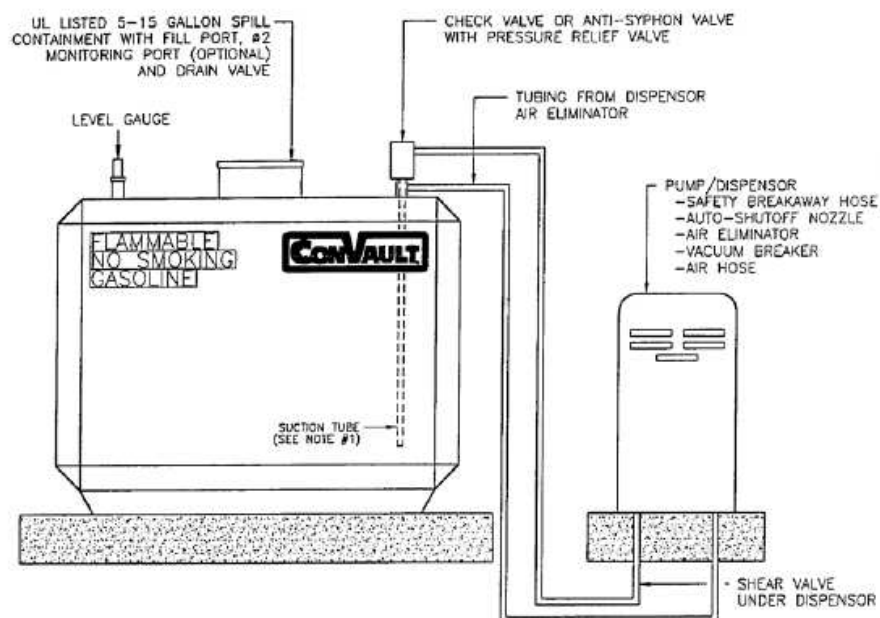

Notes:

1. Bottom of foot valve/strainer to be 1" from bottom of steel tank
2. Stairway assembly to fill port (optional)

Figure C-3 (continued) ConVault® Aboveground Storage Tanks




The Industry Leader In Aboveground Fuel Storage Systems

4. Submersible Pump Dispensing Application

The diagram shown in Figure No. 11 is recommended for those sites authorized to either: dispense to motor vehicles for public use or fleet vehicles with high-speed dispensing accessories. In addition to the **General Applications Requirements in M.1 and M.2 on page 33**, the system should be equipped with:

- a) Solenoid valve with pressure relief,
- b) Emergency shear valve, if required by Authority Having Jurisdiction,
- c) Submersible pump, which will require 220-volt electric supply.

Figure No. 11

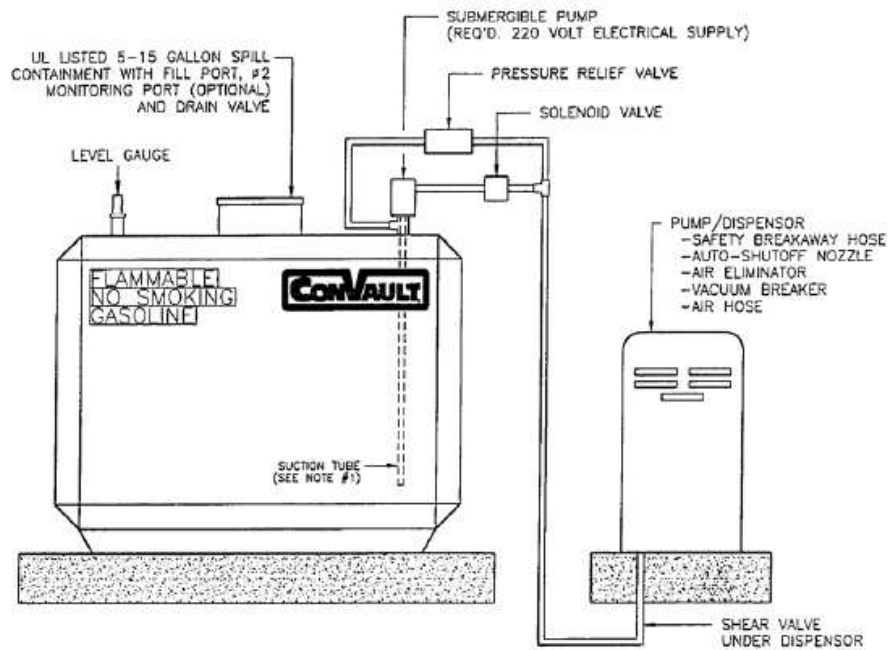

Notes:

- 1. Bottom of foot valve/strainer to be 1" from bottom of steel tank
- 2. Stairway assembly to fill port (optional)

Figure C-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems


O. GENERATOR FUEL SUPPLY APPLICATION

The diagrams shown in Figure No. 12, 13 and 14 are recommended for those sites utilizing a ConVault® AST to supply a generator, whether it is primary or standby in function. See also the General Applications Requirements in M.1 and M.3 page 33.

For directions and side view, see Figure 12; for end view, see Figure 13; for option of using one connection for both suction and return lines see Figure 14.

Figure No. 12

Side View

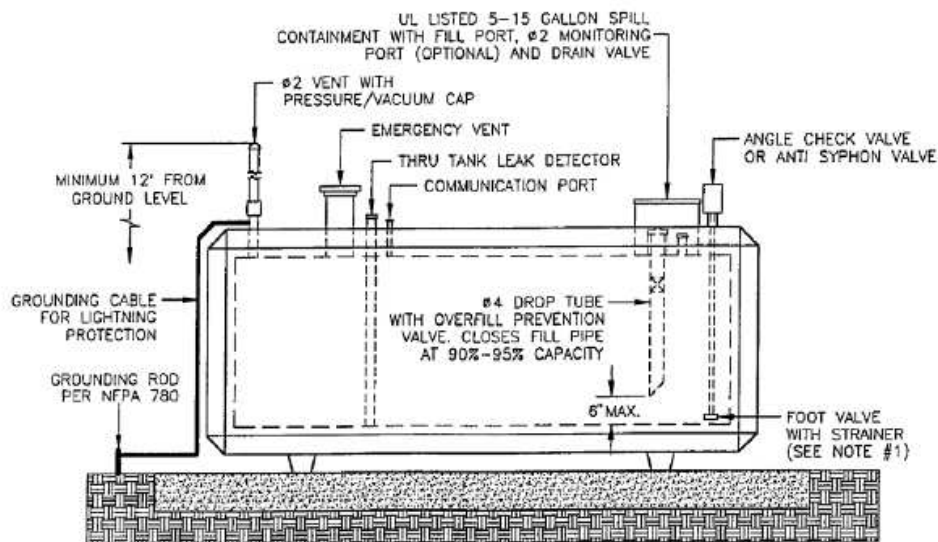

Notes:

1. Bottom of foot valve/strainer to be 1" from bottom of steel tank
2. Stairway assembly to fill port (optional)


Figure C-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

See the General Applications Requirements in M.1 and M.3 page 33.

Figure No. 13
Generator Fuel Supply
End View

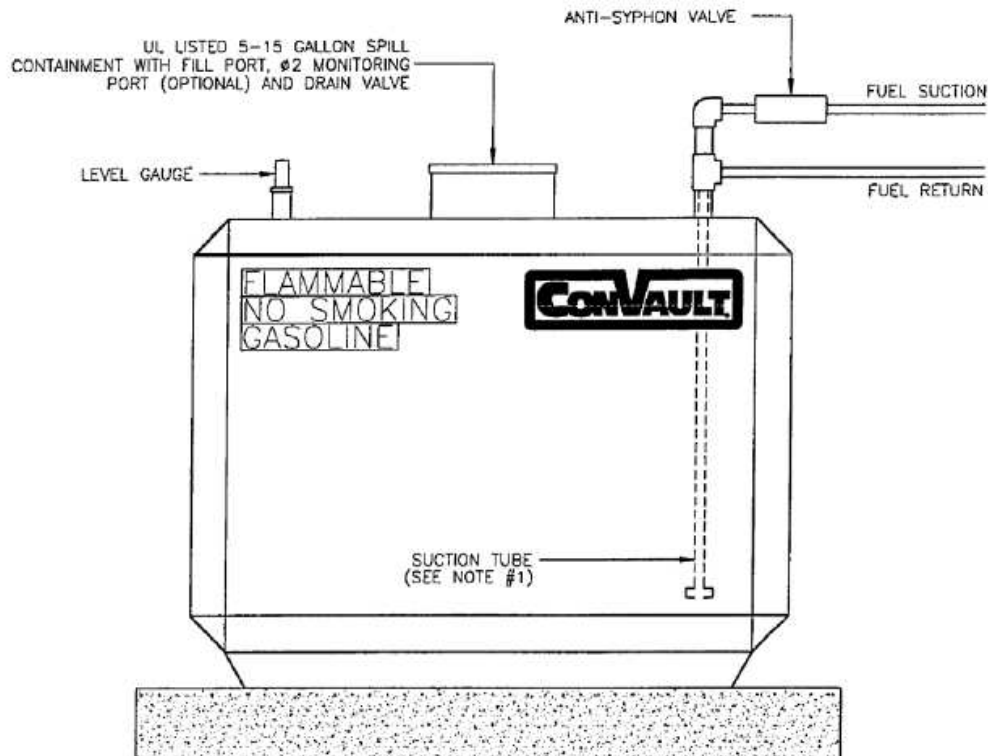

NOTES:

1. Bottom of foot valve/strainer to be 1" from bottom of steel tank
2. Stairway assembly to fill port (optional)


CAUTION Do not connect any fuel return or vapor recovery pipe to leak detector tube or communication nipple. Failure to comply will result in filling the interstice with fuel and consequently voiding your warranty. The leak detector tube and the communication nipple are powder coated red for easy identification.

Figure C-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

Figure No. 14
Generator Fuel Supply
Optional use of one connection for both suction and fuel return line.

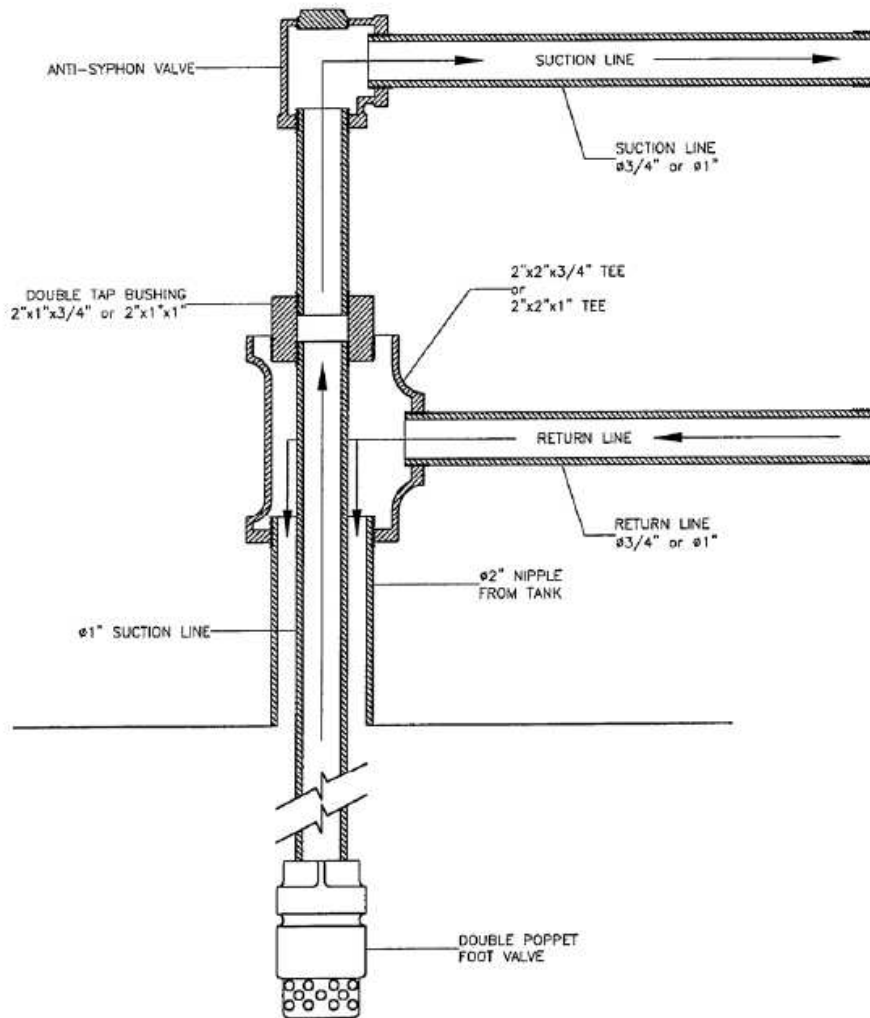

April 2007

Installation Instructions

Pg. 40

Figure C-3 (continued) ConVault® Aboveground Storage Tanks




The Industry Leader In Aboveground Fuel Storage Systems

P. USED OIL APPLICATION

The diagram provided in **Figure No. 15** is recommended for use with used oil storage and is not a requirement. Confirm with the local Authorities Having Jurisdiction and ensure that all pertinent operational requirements have been met in advance of installation. See also the **General Applications Requirements** in M.1 page 33.

ConVault® recommends the use of a used-oil receptacle, stair clamps, and a step-platform for manual pouring sites. Where the tank is filled by a remote pump, an overfill prevention system should be utilized. ConVault® recommends the use of an audible alarm in conjunction with existing level indicator devices, as well as a solenoid valve in the fill pipe or shut-off switch to control the pump. Fire extinguisher and spill cleanup kit should be provided at the site.

Figure No. 15

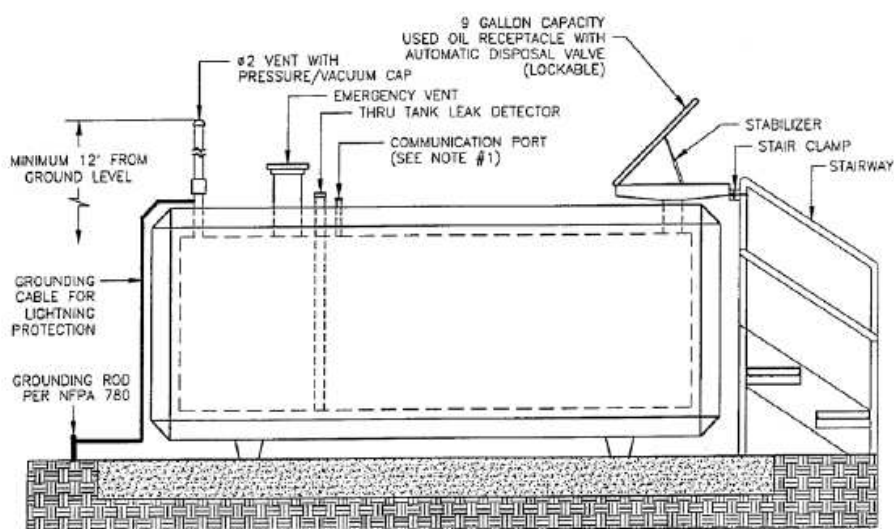

1. STAIRWAY ASSEMBLY TO FILL PORT (OPTIONAL)


Figure B-3 (continued)

ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

OPERATING MANUAL

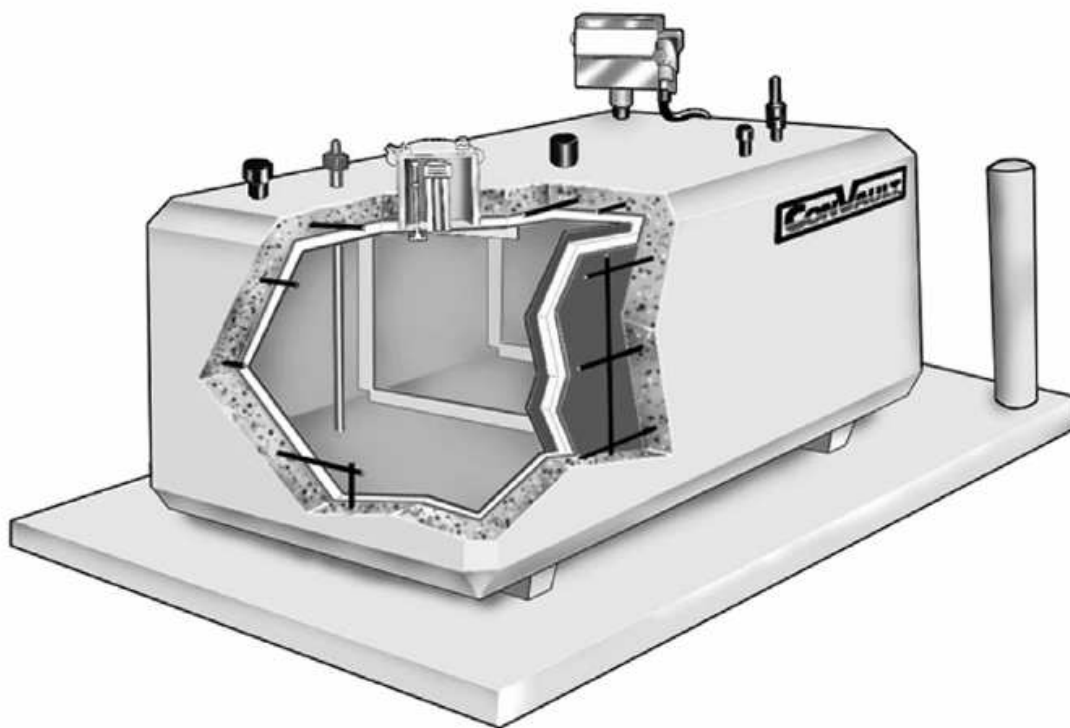

April 2007

Operating Manual

Pg. 42

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

TABLE OF CONTENTS

	Page No.
A. GENERAL	44
B. FILLING THE TANK	44
C. GENERAL FIRE PROTECTION	45
D. LEAK DETECTOR	45
E. COMMUNICATION NIPPLE	46
F. FUEL DISPENSING	47
G. OVERFILL PROTECTION	47
H. VENTING	48
1. Atmospheric Vent	48
2. Primary Tank Emergency Vent	48
3. Secondary Containment Emergency Vent	48
I. SPILL CONTAINMENT	49
J. BACTERIA MONITORING AND CONTROL	49
K. WATER MONITORING AND CONTROL	49

Figure B-3 (continued) Convault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

A. GENERAL

Convault® tank is a steel storage tank insulated with Styrofoam and wrapped in a secondary containment consisting of 30 mil high density polyethylene membrane encased in a 6 inch thick reinforced concrete vault.

Since the tank contains flammable or combustible liquids, it is therefore prudent that general common sense is exercised in operating the fuel storage system. Dispensing of fuel from the Convault® storage tank to other equipment, automobiles, generators, etc., requires connection of accessories to the tank. Therefore it is important to establish practices and procedures to ensure that accessories and their piping connections are free from any leaks or other hazardous conditions.

- **NOTE:** it is very important that you familiarize yourself with the fuel dispensing equipment and accessories and follow their manufacturer's operating instructions to their full extent. Equipment manufacturer's operating instructions, guidelines, and recommendations take precedence to the instructions contained in the Convault® operating manual. Use the following list as your order of priority:
 1. Local jurisdiction codes, rules and regulations.
 2. Applicable state codes, rules and regulations.
 3. Applicable regional and national codes, rules and requirements.
 4. Manufacturer's recommended installation, and operating procedures.
 5. Convault® operating manual.

B. FILLING THE TANK

- **NOTE:** Filling of tanks should be carried out under continuous and close supervision.

Tank filling nipple is a threaded 4 or 6-inch pipe located inside the spill containment compartment. The filling nipple is located lower than the containment top to catch any potential spills.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

CAUTION DO NOT ever use the 2" Leak Detector Tube or the 1" communication nipple for filling the tank. These nipples are not connected to the primary tank. They are powder coated red to distinguish them from all other primary tank nipples, which are coated black or white. If the leak detector tube or the communication nipple are used as filling ports, or connected to any other filling or vapor recovery system, the secondary containment will be filled with fuel or petroleum product vapors. This will invalidate your ConVault® Limited Warranty. It is essential that all operating personnel and fuel delivery truck drivers are trained and are made familiar with the proper filling operations.

- **NOTE:** Multi-Compartment tanks must be carefully labeled to prevent cross-filling the individual tanks; for example, a double 500 gallon tank should be labeled as diesel and gasoline to insure the operator or the fill truck driver can easily identify each compartment.

C. GENERAL FIRE PROTECTION

Smoking is prohibited within fifty feet (50') of all storage and dispensing devices. Signs prohibiting smoking must be conspicuously posted.

Portable fire extinguishers must be provided for the suppression of fires in accordance with NFPA 10 and UFC for high hazard area. Additional fire control equipment might be required, if in the opinion of the fire official, an unusual fire exposure hazard exists.

D. LEAK DETECTOR

All ConVault® aboveground storage tanks are equipped with one or two Leak Detector Tubes to enable you to check and monitor any leaks from your primary steel tank into the secondary containment. The secondary containment consists of a 30-mil high-density polyethylene membrane encased in 6-inch thick concrete to provide 2-hour fire resistant vault for protection of primary and secondary containments.

The primary steel storage tank is shop-tested at 5 psig for 24 hours and is checked for leaks and any other damage before it is wrapped in the secondary containment. Under normal circumstances, the primary steel tank is not expected to leak.

Notwithstanding the above, the tanks should be visually inspected, on a weekly basis for any signs of leaks from the primary tank, pipes, fittings, and auxiliary equipment attached or connected to the tank.

The 2-inch leak detector tube is located on top of the tank and is powder coated in red to make it easy to identify. Except for a 1-inch communication nipple and the 2-inch leak

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

detector tube, all other connections on the tank are powder coated black or white. If the leak detector tube is not equipped with mechanical or electronic leak monitoring devices, to perform your weekly operating inspection, remove the cap and insert a clean dry wooden gauge stick into the leak detector tube until the wooden stick touches the bottom. Remove the gauge stick and visually inspect the gauge stick for any sign of fuel. If the gauge stick is wet or smells like hydrocarbon fuel, call your ConVault® distributor or the corporate office at 209-632-7571 or toll free 800-222-7099. Be prepared to provide the following information:

1. Location of the tank
2. Tank size
3. UL or UL Canada serial number.

E. COMMUNICATION NIPPLE

ConVault® tanks are equipped with a one inch (1") communication nipple powder coated red. Under normal operating conditions, the communication nipple should be kept capped. The communication port is provided to disperse air from the secondary containment during certain performance tests. Such tests, if deemed necessary by the ConVault® representative, should be performed under direct supervision of ConVault® or its authorized representative.

- **NOTE:** If your ConVault® is fitted with a double walled steel tank, the 1" communication nipple is not required and therefore it will not be supplied.

CAUTION **DO NOT** ever use the 2" Leak Detector Tube or the 1" communication nipple for filling the tank. These nipples are not connected to the primary tank. They are powder coated red to distinguish them from all other primary tank nipples, which are coated black or white. If the leak detector tube or the communication nipple are used as filling ports, or connected to any other filling or vapor recovery system, the secondary containment will be filled with fuel or petroleum product vapors. This will invalidate your ConVault® Limited Warranty. It is essential that all operating personnel and fuel delivery truck drivers are trained and are made familiar with the proper filling operations.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

F. FUEL DISPENSING

- Important Note: Any pump described as “remote” must be approved by the Authorities Having Jurisdiction in advance of the installation of the pump. Specific operating instructions must be obtained from the manufacturer of such pump, and followed implicitly and exclusive of any ConVault® directives.
- NOTE: The majority of ConVault® tanks are equipped with either a Fill-Rite pump or GasBoy pump. However, your tank may have been supplied with a different pump make. Familiarize yourself with the make of the pump supplied with your tank. Make sure you get the manufacturer’s operating manual. Learn how to operate the pump, and make sure your operating personnel know how to operate it as well.
- NOTE: Do not overfill or top off fuel port.
- NOTE: The minimum 1/4” Styrofoam insulation and the six-inch (6”) concrete vault give thermal protection that minimizes temperature change for liquid fuels stored in excessively hot or cold environments. However, the liquid fuel will have some temperature variation at different times of the day. The liquid will expand or contract due to temperature changes and may slightly affect your level gauge indications. You may experience a slight variation in volume measurements for the same amount of liquid in the tank. On average, gasoline and diesel fuel will have about 0.6% and 0.4%, respectively, variation in volume for every 10-degree-F temperature difference. For example for a 6,000-gallon gasoline tank (full), a 10-degree-F temperature change will be equivalent to a 1/2” (or a 36 gallon) difference in liquid level in your tank.

G. OVERFILL PROTECTION

The U.S. EPA requires that the tank have overfill protection measures that include an overfill alarm and an automatic flow restrictor or flow shut-off. Additionally, all product transfers must be constantly monitored.

We recommend a level gauge or level indicator be installed on the tank to meet the fire code requirements. This gauge must be accessible to the delivery operator.

State or local fire or environmental regulations may contain additional requirements. Check with you local Authorities Having Jurisdiction.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

NOTE: Check your tank and make sure which type of overfill protection you have received on your tank and familiarize yourself and your operating personnel with the accessories provided and their operation.

H. VENTING

1. Atmospheric Vent:

ConVault® tanks must be provided with 2 inch vent line for venting into atmosphere in case of a pressure build-up inside the tank. Make sure vent cap is not obstructed to allow free flow of vapors from the vent. Obstruction of 2-inch vent line cap may lead to pressure build-up inside the tank and cause the emergency vent system to open.

2. Primary Tank Emergency Vent:

ConVault® tanks must be provided with emergency pressure relief devices to automatically relieve the pressure of the primary tank before it reaches a maximum of 2.5 psig. Tank sizes from 125 gallon to 12,000 gallon are provided with 2 inch to 8-inch emergency pressure relief nipples and pressure relief devices. See WARNING under testing on page 60. Tanks with over 5,000 gallons capacity may have been provided with a manway cover that has long bolts instead of an emergency vent device. Before the pressure inside the tanks rises to 2.5 psig, the pressure relief device or the long bolt manhole cover rises, allowing the vapor inside the tank to escape and thus relieve the pressure inside the tank. At 2.5 psig pressure, the emergency venting device will be fully open.

3. Secondary Containment Emergency Vent:

The ConVault® Non-Metallic secondary containment tanks have UL listing for emergency venting by "Form of Construction". Therefore, installation of an emergency vent on the secondary containment will not be required. If the Authorities Having Jurisdiction require the tank to be provided with an emergency vent, then the secondary containment may be provided with an emergency venting device as an optional item. Depending on the size of the tank the venting device size will be 4 inch to 8 inch. The emergency venting device will open before the secondary containment internal pressure reaches 2.5 psig. At 2.5 psig pressure, the emergency venting device will be fully open.

- **NOTE:** Familiarize yourself and your operating personnel with the emergency pressure relief systems provided and their operation on your tank. The Uniform Fire Code (UFC) requires the system to be fully operational at all times.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

I. SPILL CONTAINMENT

ConVault® tanks are provided with 5 to 15-Gallon spill containment mounted on top of the tank, surrounding the tank fill-pipe with spill containment except for the remote fill. The containment will catch occasional spills. A hand-activated valve is provided inside the containment to drain the spill back into the primary tank.

J. BACTERIA MONITORING AND CONTROL

Bacterial infestation of fuel tanks and lines, originating from the fuel, chemically alter fuel to produce water, sludge and acids. Water and acids are corrosive and can cause severe corrosion in the tank, especially in the diesel fuel storage, at the bottom part of the tank in the interface between water and fuel. Also, microbial growth can cause fuel filter plugging, injection failing, system deposits, and corrosion of tanks and lines. You should arrange to have your fuel analyzed for microbial growth and to eradicate the infestation, if any. This program will prevent corrosion of your tank and piping and fuel filter plugging. Contact your fuel supplier for the locations and service of research labs that can test the fuel system and help you control bacterial infection. Also, ask your fuel supplier for the frequency of such tests needed to control bacterial infection. Bacteria cannot grow if there is no water in the fuel. Monitoring and controlling of water accumulation in the tank will also prevent bacterial growth. See paragraph K on water monitoring and control.

K. WATER MONITORING AND CONTROL

You may get water in the fuel through condensation of water vapor from the air. Water is heavier than fuel and therefore it settles at the bottom of the tank and causes corrosion. One way of minimizing condensation of water vapor inside the tank is by installing a pressure/vacuum vent (PVV) cap on your tank. The PVV cap normally keeps the vent line closed unless the internal tank pressure or vacuum opens it. The advantage of the PVV cap is that under normal operating conditions it keeps the outside air from entering the tank through the vent. Water may also enter the tank with the fuel delivered to you. You should regularly monitor the tank and make sure that there is no water accumulated at the tank bottom. If there is water at the tank bottom, you should pump it out with a small hand held pump called a "Thief Pump". If you do not monitor and pump out the water from the tank bottom, the useful life of your tank may be reduced dramatically.


CAUTION Water and bacteria monitoring and control are essential to preventing internal corrosion of steel tanks. Lack of such control measures by the owner and operator may invalidate the ConVault® Limited Warranty.

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

MAINTENANCE MANUAL

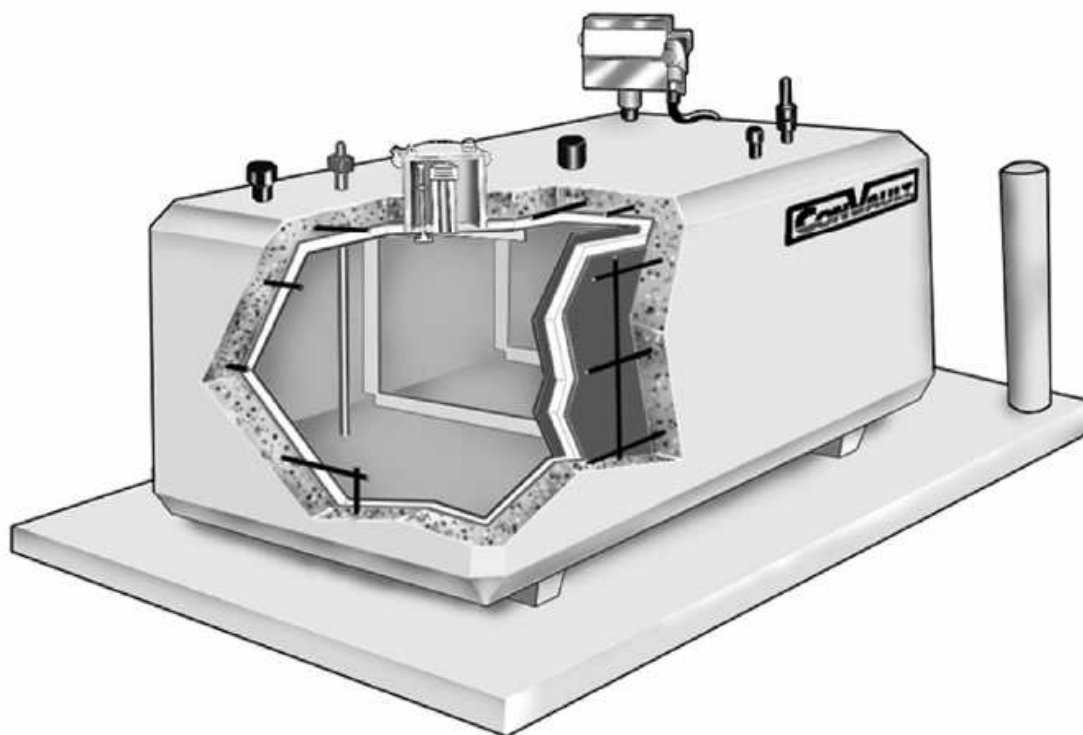

April 2007

Maintenance Manual

Pg. 50

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

TABLE OF CONTENTS

	Page No.
A. FUEL TANK-CONVAULT®	52
B. FUEL PUMPS	53
C. NOZZLES	53
D. FILTER	53
E. MISCELLANEOUS VENTS, HOSES, AND GAUGES	54
F. EMERGENCY RELIEF VENT	54
G. LEAK DETECTOR PADLOCK	55
H. BACTERIA MONITORING AND CONTROL	55
I. WATER MONITORING AND CONTROL	55
J. PREVENTIVE MAINTENANCE	56

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

A. FUEL TANK-CONVAULT® (ALL SIZES)

⚠ WARNING Never enter a tank without proper equipment. Provide proper equipment and proper procedures for operation and maintenance personnel for entering a confined space. Entering a tank without proper equipment may result in injury or death.

The owner/operator is required to inspect the tank visually on a regular basis, at least once a week. Visual inspection is the primary form of maintenance required. The inspection and maintenance should include the following:

1. Check for small cracks, and any signs of leakage. Fill and repair the small cracks. The touch-up paint provided at the time of delivery, for paint coated tanks, can be used for repair of the chipped paint.
2. Inspect all decals and signs and replace if not readable. Extra decals can be purchased through your local distributor. All decals must be on the tank before filling it.
- **NOTE:** Multi-Compartment tanks must be carefully labeled to prevent cross-filling the individual tanks; e.g., a D500 should be respectively labeled as diesel and gasoline to insure that each compartment can be easily identify by fuel truck driver or by the system operator.
3. Inspect the leak-detector tube for any signs of leakage from the primary steel tank into the secondary containment. See specific instruction for leak detection under paragraph D, page 45 and paragraph G, page 55.
4. Inspect nipples; spill containment and manholes for any sign of powder coating deterioration and corrosion. Remove the deteriorated and chipped off coating. Then sand, clean, and paint in accordance with the paint manufacturer's recommendation.
5. Confirm with your local fuel supplier the need to utilize additives for seasonal variances or to reduce corrosion of the inner steel tank due to local fuel impurities / intermittent moisture. Your local fuel supplier should be able to provide this guidance.
6. For Tank Maintenance Checklist, see Appendix A

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

B. FUEL PUMPS

- **IMPORTANT NOTE:** Any pump described as “remote” must be authorized by the Authorities Having Jurisdiction in advance of its installation. Pump manufacturer’s operating and maintenance instructions must be followed. The ConVault® distributor can advise you how to contact the manufacturers for more details on fuel dispensing equipment and their maintenance procedures.

⚠ DANGER To avoid fire, electric shock, and injury or death, turn off power at circuit breaker or fuse. Test that power is off before servicing electrical wiring.

1. Follow pump manufacturer’s recommendation for the procedure and frequency of maintenance.
2. Disconnect electrical equipment from the main electric power to eliminate electrical shocks.
3. Check the motor for any sign of over-heating or excessive wear.
4. Check the meter and reset.
5. Have your electrical wiring connections checked by a qualified person.

C. NOZZLES

1. Visually inspect the nozzle for wear and tear.
2. Inspect the trigger mechanism for any sign of metal fatigue and mechanical failure.
3. Check for leaks around connection to hose.

D. FILTER

1. Replace the filter every six (6) months or as needed. Mark the date changed on the filter.
2. Check all fittings for leaks. Tighten or adjust the fittings as needed.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

E. MISCELLANEOUS VENTS, HOSES, AND GAUGES

1. Visually inspect all vents, vent caps, hoses, level indicators and gauges at least once a week. Check hoses for leaks at least once a week.
 2. Check, all hoses and fittings for excessive wear--replace, if needed.
 3. Check fuel gauge for proper operation. Level indicator should indicate approximate amount of fuel in the tank. If gauge is not reading the proper amount of fuel, test fuel level manually with wooden stick gauge and compare it with automatic gauge. If gauge is not indicating the correct amount of fuel, remove and inspect the float assembly. If damaged, replace defective parts.
- **NOTE:** The minimum 1/4" Styrofoam insulation and the six (6") concrete vault give thermal protection that minimize temperature change for liquid fuels stored in excessively hot or cold environments. However, the liquid fuel will have some temperature variation at different times of the day. The liquid will expand or contract due to temperature changes and may slightly affect your level gauge indications. You may experience a slight variation in volume measurements for the same amount of liquid in the tank. On average, gasoline and diesel fuel will have about 0.6% and 0.4% respectively, variation in volume for every 10-degree-F temperature difference. For example for a 6,000-gallon gasoline tank (full), a 10-degree-F temperature change will be equivalent to a 1/2" (or a 36 gallon) difference in liquid level in your tank.

F. EMERGENCY RELIEF VENT

1. Check the operation of emergency relief vent of the primary tank (and the secondary containment venting device if provided) at least once a year by lifting top cap and releasing it. Emergency relief vent cap should operate free from any restrictions and reseal upon release. Emergency relief vent caps should not be propped open, as this action will facilitate loss of fuel through vaporization.
 2. Check atmospheric vent cap for proper operation and ensure that it is not obstructed or prevented from venting into atmosphere.
- **NOTE:** Familiarize yourself with the emergency pressure relief system provided on your tank. The Uniform Fire Code (UFC) requires the system to be fully operational at all times. See paragraph H.2 on page 48 and WARNING on Page 60.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

G. LEAK DETECTOR PADLOCK

Inspect the lock on the leak detector tube cap for corrosion. Oil the lock in key slot with lightweight lube oil, when required. The lock should always be attached to the cap to prevent accidental filling of leak detector with fuel.

- **NOTICE:** See CAUTION under paragraph B, FILLING THE TANK, of OPERATING MANUAL, page 44 and paragraph D, LEAK DETECTOR, page 45.

H. BACTERIA MONITORING AND CONTROL

Bacterial infection on fuel tanks and lines, originating from the fuel, chemically alter fuel to produce water, sludge and acids. Water and acids are corrosive and can cause severe corrosion in the tank, especially in the diesel fuel storage and at the bottom part of the tank. Also, microbial growth can cause fuel filter plugging, injection failing, system deposits, and corrosion of tanks and lines. You should arrange to have your fuel analyzed for microbial growth and to eradicate the infestation, if any. This program will prevent corrosion of your tank and piping and fuel filter plugging. Contact your fuel supplier for the locations and service of research labs that can test the fuel system and help you control bacterial infection. Also, ask your fuel supplier for the frequency of such tests needed to control bacterial infection. Bacteria cannot grow if there is no water in the fuel. Monitoring and controlling of water accumulation in the tank will also prevent bacterial growth. See paragraph I on Water Monitoring and Control.

I. WATER MONITORING AND CONTROL

You may get water in the fuel through condensation of water vapor from the air. Water is heavier than fuel and therefore it settles at the bottom of the tank and causes corrosion. One way of minimizing condensation of water vapor inside the tank is by installing a pressure/vacuum vent (PVV) cap on your tank. The advantage of the PVV cap is that it normally keeps the vent line closed unless the internal tank pressure or vacuum opens it, thus reducing the amount of moist air entering the tank through the vent. You should regularly monitor the tank and make sure that there is no water accumulated at the tank bottom. If there is water at the tank bottom, you should pump it out with a small hand held pump called a "Thief Pump". If you do not monitor and pump out the water from the tank bottom, the useful life of your tank may be reduced dramatically.

CAUTION Water and bacteria monitoring and control are essential to preventing internal corrosion of steel tanks. Lack of such control measures by the owner and operator may invalidate the ConVault® Limited Warranty.

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

J. PREVENTIVE MAINTENANCE


1. Preventive maintenance can be less expensive compared to the cost of system shutdown and repairs. In the long run, preventive maintenance will save you money.
 2. See Appendix A for suggested Maintenance Checklist and Maintenance Procedures.
 3. Always be looking at how you can implement a preventive maintenance program.
- **FINAL NOTE:** Should you require any assistance in the aforementioned maintenance instructions on ConVault® aboveground fuel storage tanks, please call (800) 222-7099 for details or email us at info@convault.com.

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

TESTING MANUAL

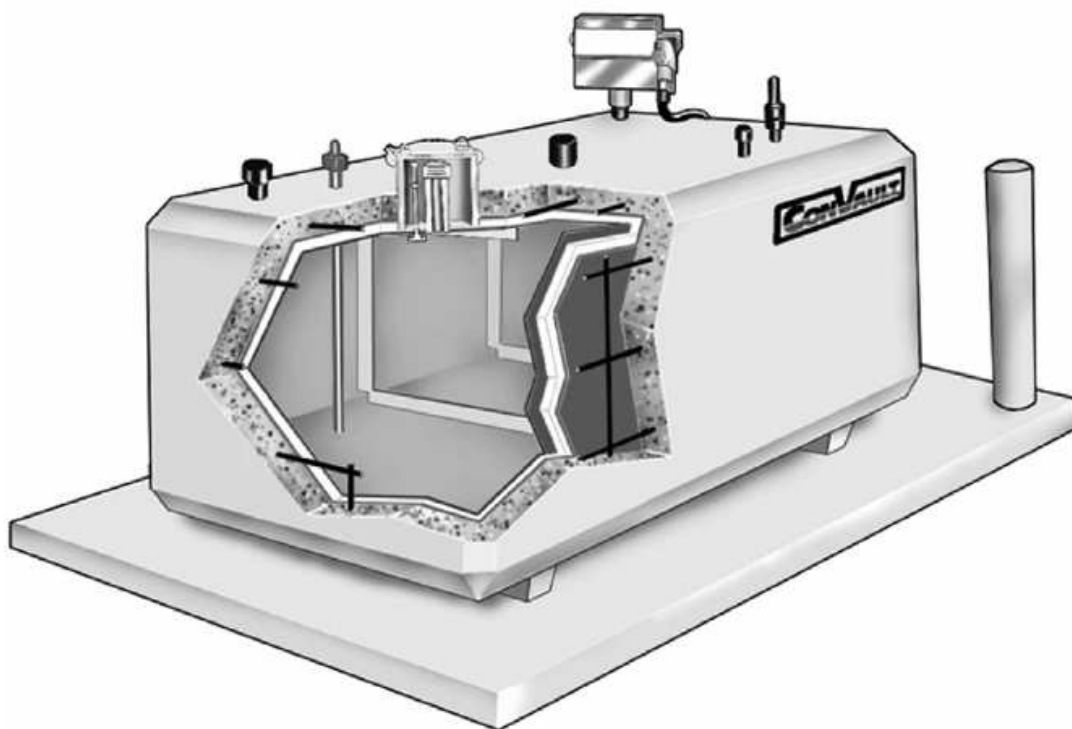

April 2007

Testing Manual

Pg. 57

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

TABLE OF CONTENTS

	Page No.
A. GENERAL	59
B. AIR PRESSURE TEST PROCEDURES FOR PRIMARY STEEL TANK	59
C. TEST PIPING DIAGRAM (Figure 16)	61

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

A. GENERAL

ConVault® tanks are shipped pre-assembled and shop-tested. Generally, this eliminates the need for site testing of the tanks. However, some fire and local authorities may require the tanks to be pressure tested on site. It may be required to test the primary steel tank or both the primary steel tank and the secondary containment. If such tests are required on site, proceed with the following instructions. Make sure every step of the test procedure is carried out according to the instructions and pay careful attention to the **Cautions** and **Warnings** in the procedure.

▲WARNING Using air, never pressure test a tank that contains flammable and combustible material. If the tank contains flammable or combustible material, it should be tested using inert gases such as Carbon Dioxide or Nitrogen. Improperly testing a tank containing flammable and combustible materials may cause an explosion in the tank resulting in death or serious injury.

CAUTION The secondary containment should not be tested unless the test is coordinated with and supervised by ConVault® or its authorized representative. Inexperienced testing personnel can cause severe structural damage to an otherwise functional AST. Several methods are available to conduct the test of annular space. The tests should always be performed under the direct supervision of a ConVault® representative. Failure to observe this measure could void the warranty.

B. AIR PRESSURE TEST PROCEDURE FOR PRIMARY STEEL TANK

Install test piping as shown in **Figure No. 16, page 61** and proceed as follows:

1. Temporarily plug, cap, or seal off remaining primary tank openings to hold the pressure.
2. If tank is equipped with a long-bolt manway for emergency venting, replace manway long-bolts with short-bolts and tighten them securely.
3. If the tank is equipped with standard emergency vent, remove the emergency vent and cap the opening to hold pressure as required.
4. If the tank is equipped with 1-inch communication nipple, remove the cap from the communication nipple for the secondary containment.
5. If the tank is not equipped with a communication nipple, remove or open the cap on the leak detector tube.
6. If leak detector tube is equipped with mechanical or electronic level detection equipment, remove the equipment to allow the air to freely escape from the annular space.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

CAUTION The test air supply should not be more than 3 psig. Use only calibrated diaphragm type air pressure gauges with a zero to 10-psig dial span. Set pressure relief valve in test air supply line at 3 psig. Over pressurization of a tank may burst the tank and cause injury.

7. Close valve A.
8. Connect regulated test air supply line to test piping as shown in Figure No. 16 for single compartment tank. If the tank contains more than one primary compartment tank, use the same piping arrangement for each compartment and pressure test them all. The vault may contain up to 4 primary tank compartments.

CAUTION Verify that the test air supply line pressure regulator is properly set at 3 psig before proceeding.

9. Slowly open valve A to pressurize the primary tank. Close valve B. Pressure gauge should indicate a pressure of 3 psig.

CAUTION Never leave a pressurized tank unattended. The air inside the tank may heat up and gently cause the pressure inside the tank to rise above 3-psig maximum pressure. If pressure in the tank rises, the pressure should be reduced to 3 psig by opening the valve B. Failure to constantly monitor the tank internal pressure may damage the tank.

10. Close valve A. Disconnect test air supply line from test piping.
11. Hold test pressure in primary tank for 1-hour minimum. A steady drop in pressure gauge reading indicates that there may be a leak in the plumbing or in the primary tank. Make sure that plumbing is airtight.
12. If no leaks are found and the tank passes the test, then open valve A and B and let the air out of the primary tank.
13. With tank de-pressurized, remove test piping, temporary plugs, caps and seals. Reinstall the cap on the communication nipple or the level indication equipment on the leak detector tube. Reinstall emergency relief vents. If tank is equipped with an emergency vent long-bolt manway, reassemble manway cover with bolts supplied by tank manufacturer.

WARNING Reassemble manway cover with proper size and type of long-bolt, with a minimum unthreaded length of 2 inches, so that when cover is fully raised, there is a 1-1/2 inch minimum space between manway cover and frame. Failure to properly assemble cover of a long-bolt manway used for emergency venting may make vent inoperable causing bodily injury or damage to the tank.


Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

C. Test Piping Diagram

Figure No. 16

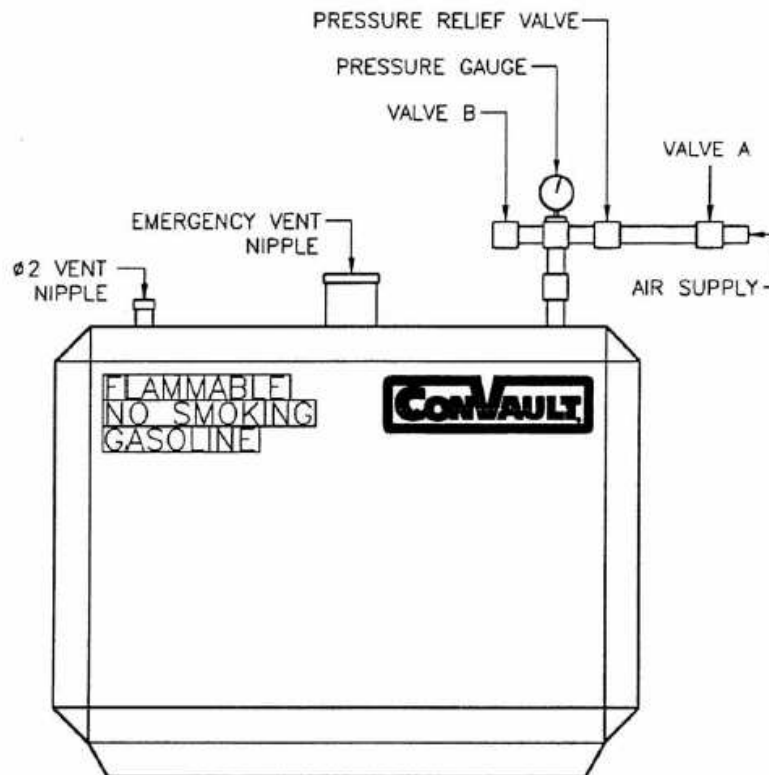

NOTE:


PLUG, CAP OR SEAL OFF ALL PRIMARY TANK OPENINGS.

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

APPENDIX A

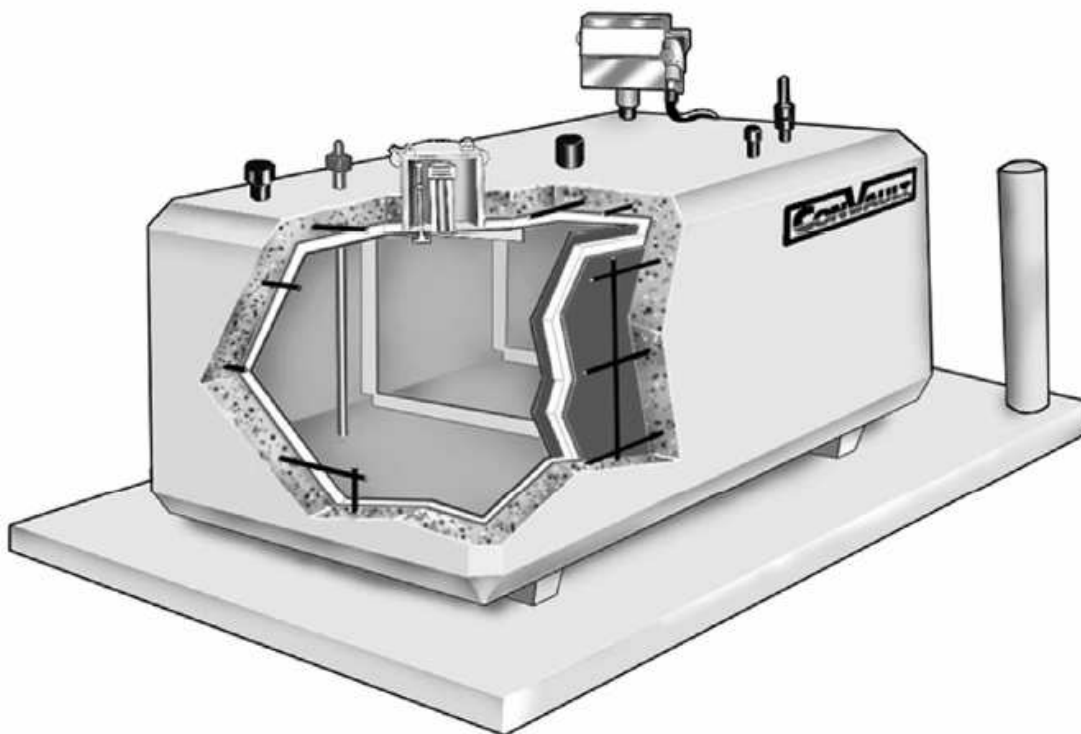

April 2007

Appendix A

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

Maintenance Checklist

Inspection Date _____

Inspector _____

Note: This checklist is designed for general use. Some items may not apply. All equipment inspections and maintenance should be documented. You are encouraged to make copies of this checklist. See the corresponding maintenance procedures and your owner's manual for corrective actions and more details.

Weekly Maintenance:

- ☐ 1. Check leak detector for indication of fluid in interstice. (This is required by warranty.) If checked with a stick gauge, ensure the stick is clean and dry before insertion.
- ☐ 2. Check for leaks on the pumps, filters, hoses, nozzles, joints and fittings.
- ☐ 3. Check nipples, spill containment and manholes for paint or powder coating decay (required by warranty). Check piping and fittings for rust.
- ☐ 4. Check pump meter and reset button.
- ☐ 5. Check fuel gauge for proper operation. If you have a Kruger At-A-Glance Gauge, check the clear cap for weathering or cracks.
- ☐ 6. Check spill containment for debris.
- ☐ 7. Check for small cracks in concrete.
- ☐ 8. Check readability of signs and decals.

Monthly Maintenance:

- ☐ 9. Check for water in the primary tank bottom under the fuel (required by warranty).
- ☐ 10. Visually check the tank, including under the tank for any signs of leakage as required by the Environmental Protection Agency 40 CFR 112.
- ☐ 11. Check leak detector tube cap for corrosion and proper operation. If a Kruger manual leak indicator is installed, remove the red ring and clear cap and check to see that the red indicator moves up and down about 1 inch freely. Also, check for weathering or cracks in the clear cap. If electronic leak detection is installed, check it by using the test button.
- ☐ 12. Check all nozzles, hoses and fittings for wear and tear.
- ☐ 13. Check trigger mechanism on nozzle for metal fatigue or mechanical failure.
- ☐ 14. Check pump motor for signs of over-heating or excessive wear.
- ☐ 15. Check body of tank for cleanliness, need of paint, or rusting where applicable. Check signs and decals for need of replacement. Check slab and supports of unit for structural soundness.
- ☐ 16. Visually check grounding wires to see that they are properly attached to the tank terminals and grounding rod.

Other Periodic Maintenance:

- ☐ 17. Replace the dispenser filter at least every six (6) months or as needed (mark the date replaced on the filter).
- ☐ 18. Check fuel for bacterial infestation or microbial growth.
- ☐ 19. Have a qualified person periodically check all electrical wiring.
- ☐ 20. Check the emergency relief vent at least once a year by lifting the top cap and releasing it to ensure freedom of movement.
- ☐ 21. At least once a year, remove the leak detection device and check for proper operation.
- ☐ 22. At least once a year, check the calibration of the fuel gauge.
- ☐ 23. Follow the pump manufacturer's recommendation for frequency and procedures of maintenance.
- ☐ 24. Document significant storage events per 40 CFR 112 and your state regulations.

Figure B-3 (continued) ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

Maintenance Procedures

Please note that item numbers on this sheet correspond to the item numbers on the Maintenance Checklist. Most of the maintenance requirements and procedures are also covered in the ConVault® owner's manual.

Weekly Checks:

1. If leak detector indicates fluid in the interstice, remove any devices and determine what the fluid is. Call your ConVault® representative.
2. If fuel leaks are detected, contact the appropriate authorities as necessary. Tighten, repair as necessary, replace components, or contact your installer or service company.
3. If paint or powder coating deterioration occurs on nipples, spill containment or manholes, clean to bare metal, prime with a good quality zinc based primer, and repaint. If corrosion is severe, contact your ConVault® representative as soon as practical.
4. If dispenser meter is not working or will not reset, call your service company or installer.
5. If the fuel gauge fails to operate properly, repair/replace it, or call your service company before the next delivery. (It is the owner/operator's responsibility to prevent the overfilling of the tanks. The gauge is part of the required system to prevent overfilling.) If the Kruger gauge cap has deteriorated, it could be allowing rainwater into the primary tank and should be replaced.
6. Keep spill containment clear of debris at all times. A contaminated spill containment will cause the fuel to be contaminated when any spill is released through the drain into the primary tank. Materials such as rags or paper products used to clean the spill containment must be disposed of properly, as they will usually contain fuel from the spill containment.
7. If there are small cracks in the concrete, fill and repair them. If you have questions, call your local ConVault® representative.
8. If signs or decals lose visibility, order replacements from your local ConVault® representative before the next time the tank is filled.

Monthly:

9. If there is water in the tank it will collect at the bottom, under the fuel. Water in the tank will cause increased corrosion. If you discover water in the primary tank it must be removed. One method is to pump it out with a "Thief Pump", a small pump that pulls the water from the bottom 1/8" of the tank. Check tank openings for possible water entry points. If you find that you are pumping out more than one half gallon of water for every 1000 gallons of product stored, see your fuel dealer, or call your ConVault® representative. Also consult paragraph I in the maintenance section of the owner's manual.
10. If you detect leakage, determine what the liquid is, if possible. If it is fuel, call your ConVault® representative and appropriate authorities as necessary. If it is water, seal the top using the ConVault® repaint guidelines.
11. If there are problems with the leak detector tube or lock, clean and lubricate them as necessary. See paragraph G in the maintenance section of the owner's manual. If the Kruger leak indicator does not function properly, remove it and repair or replace it. Due to ultraviolet radiation, the clear cap on the Kruger leak indicator will deteriorate over time. If it has deteriorated, it could be allowing rainwater into the interstitial area and should be replaced. New caps and rings or entire units can be purchased from Kruger, your service company, or your ConVault® representative. Kruger now offers a guard, which will prolong the life of the cap. If electronic leak detection test fails, call your service company.

Figure B-3 (continued)
ConVault® Aboveground Storage Tanks



The Industry Leader In Aboveground Fuel Storage Systems

12. If nozzles, hoses or fittings exhibit signs of wear and tear, repair/replace as necessary or call your service company.
13. If trigger mechanism on nozzle exhibits signs of metal fatigue or mechanical failure, replace nozzle or call your service company.
14. If pump motor shows signs of overheating such as housing discoloration or excessive wear such as bearing noise, repair as necessary or contact your service company.
15. Clean, paint, and repair problem areas as necessary. Order replacements signs or decals from your local ConVault® representative. If the slab is cracking or settling, contact your local ConVault® representative and your slab installer. If you have questions, call your local ConVault® representative.
16. Make a visual inspection of grounding wires. If they are not attached properly, make appropriate changes or call your installer or your service company.

Other Periodic Maintenance:

17. Filters can be purchased from your ConVault® representative or local service company. The date can be scratched on with a sharp object, or written with a permanent marker.
18. If bacterial infestation is detected, consult paragraph H in the maintenance section of the owner's manual.
19. Repair as necessary. Wiring (other than intrinsically safe items) in a class 1 area requires special sealing to prevent explosions.
20. If the emergency relief vent exhibits signs of motion restriction, promptly call your installer, your service company, or your ConVault® representative. Proper operation of this device is critical as most injuries and fatalities that happen in conjunction with fuel fires are due to improper, non-functional emergency relief vents or emergency relief vents replaced with normal pipe caps.
21. Most leak detection devices use a float. By removing the device from the leak detector tube and turning it upside down (simulating a floating situation) you can easily check for movement of the float and proper mechanical or electronic indication. If the leak detection device fails to operate properly, call your installer or your service company.
22. The fuel gauge can be checked by "sticking" the tank and comparing it to the gauge reading. Some gauges are more accurate than the stick. If the gauge reading varies substantially from the stick reading, contact the gauge manufacturer or service company. If your stick reads in inches only and you need a calibration/conversion chart, contact your ConVault® representative or download a copy from the ConVault® website.
23. Pump maintenance requirements vary by manufacturer. If you have questions, contact your installer, local service company, or the manufacturer of the equipment.
24. If you have a warranty or environmental problem down the road, documentation will be very helpful. We recommend that you keep a copy of the "Maintenance Checklist" with items marked for every maintenance inspection. Notes about problems and corrections can be written on the back of the sheet and used for future reference. Many sites are now required to have a SPCC plan for emergencies on file. If you need a recommendation for companies that do this, please call your ConVault® representative. The name, phone number and location of your local representative can be obtained from the ConVault® web site by clicking on "Local Distributor" and your state or country at <http://www.convault.com>.